Manualslib.com - The Global Manuals Library

SHARP 20F650 SERVICE MANUAL

Quick Links

Electrical Specifications
Service Manual
Service Mode
Adjustment Method
Block Diagram
Main Block Diagram
Description of Schematic Diagram
Schematic Diagrams

Table of Contents

Table of Contents
ELECTRICAL SPECIFICATIONS
service manual
sharp corporation
IMPORTANT SERVICE SAFETY PRECAUTION
safety notice
LOCATION OF USER'S CONTROL
INSTALLATION AND SERVICE INSTRUCTIONS
SERVICE MODE
self adjustment
ADJUSTMENT METHOD
CHASSIS LAYOUT
BLOCK DIAGRAM
main block diagram
WAVEFORMS
DESCRIPTION OF SCHEMATIC DIAGRAM
SCHEMATIC DIAGRAMS
PRINTED WIRING BOARD ASSEMBLIES
REPLACEMENT PARTS LIST
PACKING OF THE SET
Other ManualsLib Projects

SHARP SERVICE MANUAL

S35F420F650//

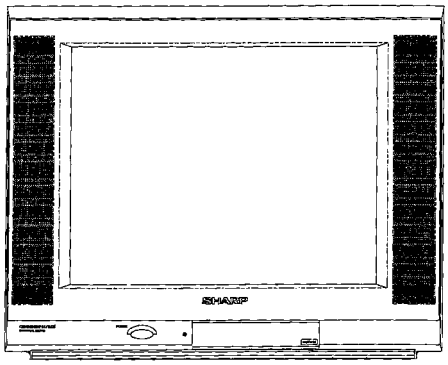

COLOR TELEVISION

Chassis No. GA-4

MODEL 20F650

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

Page

- ELECTRICAL SPECIFICATIONS 1
- IMPORTANT SERVICE SAFETY PRECAUTION 2
- LOCATION OF USER'S CONTROL 6
- INSTALLATION AND SERVICE INSTRUCTIONS 7
- SERVICE MODE 8
- ADJUSTMENT METHOD 14
- CHASSIS LAYOUT 28
- BLOCK DIAGRAM 29
- WAVEFORMS 33
- DESCRIPTION OF SCHEMATIC DIAGRAM 34
- SCHEMATIC DIAGRAMS 35
- PRINTED WIRING BOARD ASSEMBLIES 39
- REPLACEMENT PARTS LIST 43
- PACKING OF THE SET 49

ELECTRICAL SPECIFICATIONS

POWER INPUT ..... AC 120 V, 60 Hz
POWER RATING 88W
PICTURE SIZE ..... 1,239 cm^2 (192sq inch)
CONVERGENCE ..... Magnetic
SWEEP DEFLECTION ..... Magnetic
FOCUS ..... QFP/UNI-B1 Electrostatic
INTERMEDIATE FREQUENCIES
  Picture IF Carrier Frequency ..... 45.75 MHz
  Sound IF Carrier Frequency ..... 41.25 MHz
  Color Sub-Carrier Frequency ..... 42.17 MHz (Nominal)
AUDIO POWER
  OUTPUT RATING ..... 2.5 W(RMS) x 2pcs
SPEAKER
  SIZE ..... 12 x 5 cm, 2pcs
  VOICE COIL IMPEDANCE ..... 16 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE
  VHF/UHF ..... 75 ohm Unbalanced
TUNING RANGES
  VHF-Channels ..... 2 thru 13
  UHF-Channels ..... 14 thru 69
  CATV Channels ..... 1 thru 125
  (EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

IMPORTANT SERVICE SAFETY PRECAUTION

■ **Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:**

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
   To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

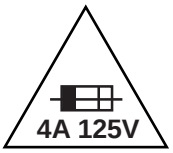

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 4A-125V FUSE.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
   It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
   The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
   Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.

- Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
- Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15μF capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.
  AII checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)
  Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

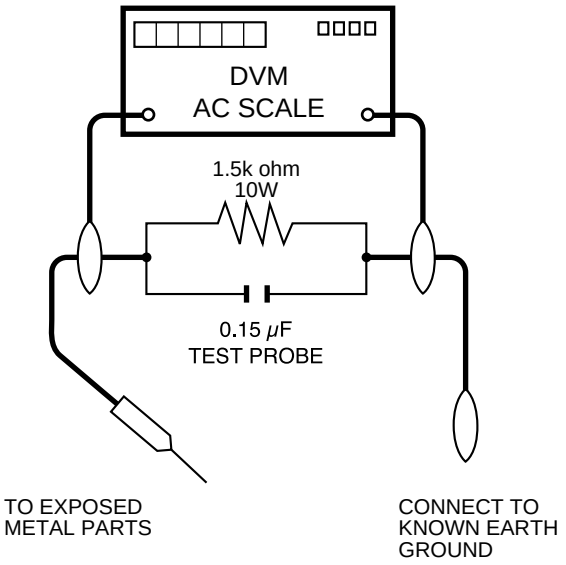

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.
Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

■ **Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.**

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le réceqteur est en marche.
4. Le châssis de ce récepteur a deux systèmes de mise à la terre qui sont séparés par un matériau isolant. Le système de mise à la terre non-isolée (chaud) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de mise à la terre isolé est pour les basses tensions C. C. B+ et le circuit secondaire du transformateur de haute tension.

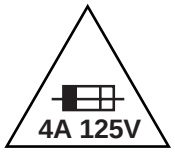

PRECAUTION:POUR LA PROTECTION CONTINUE CONTRE LES RISQUES D'INCENDIE, REMPLACER LE FUSIBLE PAR UN FUSIBLE DE MEME TYPE 4A-125V.

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce systéme, supprimer la charge statique en branchant une résistance de 10 kΩ en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anodel. (Le corden d'alimentation doit être retiré de la prise murale.)

1. Il est à noter que le tube-image de ce récepteur est intégralement protégé contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en porant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X.
   Le tube-image, seule source de rayons X dons les téleviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension".
   C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime-et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux préscrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée bout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
   Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

(Suite)

VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE

Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la facon suivante:

- Brancher le cordon d'alimentation directem-ent à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
- A l'aide de deux fils à pinces, brancher une résistance de 1,5 kΩ 10 watts en parallèle avec un condensateur de 0,15μF en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
- Utiliser un voltmètre CA d'une sensibilité d'au moins 5000Ω/V pour mesurer la chute de tension en travers de la résistance.
- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance.
  Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adpatation non polarisée peut être utilisée dans le but de terminer ces vérifications.)
  Tous les courants mesurés ne doivent pas dépasser 0,5 mA.
  Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

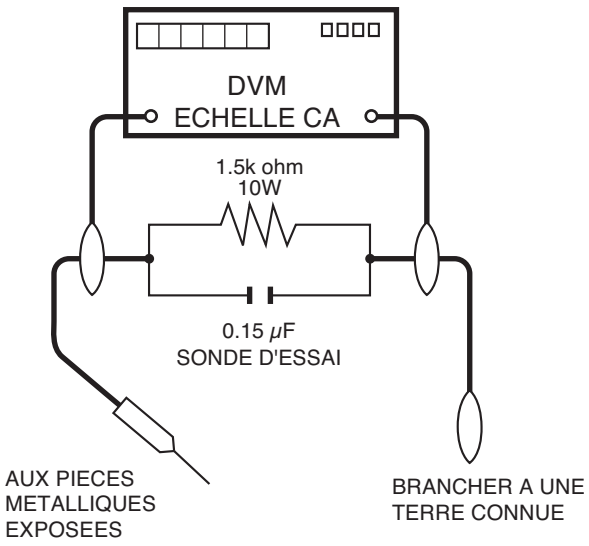

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.
Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont identifiées par la marque " ⚠ " et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.
Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL

Quick Reference Control Operation

■ Location of Controls

Front Panel

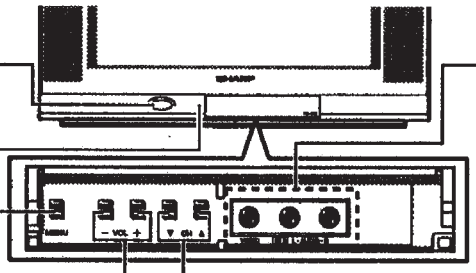

POWER
Press → On.
Press again → Off.

SENSOR AREA FOR REMOTE CONTROL

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

VIDEO IN 2 L-AUDIO-R

(INSIDE DOOR)

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.

Basic Remote Control Functions

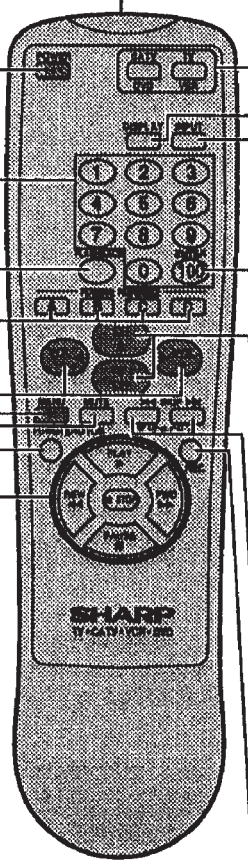

POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

PERSONAL PREFERENCE
With the Personal Preference buttons, you can program your favorite programs by using the 4 categories A, B, C and D. The channels can be accessed quickly by using these buttons.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

POWER (DVD/VCR)
Press → On.
Press again → Off.

DVD/VCR CONTROL

Infrared Transmitter Window

CATV/DVD-TV/VCR MODE buttons
Press TV/VCR, sends power and channel select commands (Channel up/down and Random Access buttons) to the TV and VCR control.
Press CATV/DVD, sends power and channel select commands to a cable TV converter and DVD control.

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INPUT
Press → Switch to external video INPUT 1 mode or COMPONENT mode.
Press 2 times → Switch to external video INPUT 2 mode.
Press 3 times → Switch back to the original TV mode.

ENTER
Used in some instances where a Cable Converter Box requires an "enter" command after selecting channels, when using the **REMOTE KEYPAD** button.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the "●" mark of the MENU screens.

SKIP/VCR-CH

REC

Note:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

INSTALLATION AND SERVICE INSTRUCTIONS

Note: (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
(2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to P603 pin3 and make sure that the voltmeter reads 19.8 ±1.1V.
5. Apply external 25.5V DC at P603 pin3 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between P603 pin1 and P603 pin2. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and set Y-mute ON by using Service R/C.
4. The voltage should be approximately 28.7kV (at zero beam).
   If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

SERVICE MODE

Service Mode Overview

1. Service mode is entered by SERVICE key input or CH-UP +VOL-DOWN input during reset.
2. Service mode is cleared by entering SERVICE key command during service mode.
3. If key input port (SERVICE) input is LOW, then it is in service mode.
4. During key input port (SERVICE) input is LOW, clearing service mode by key input SERVICE is disabled.
5. Service mode can be switched to 4 modes as follows by key input MENU;

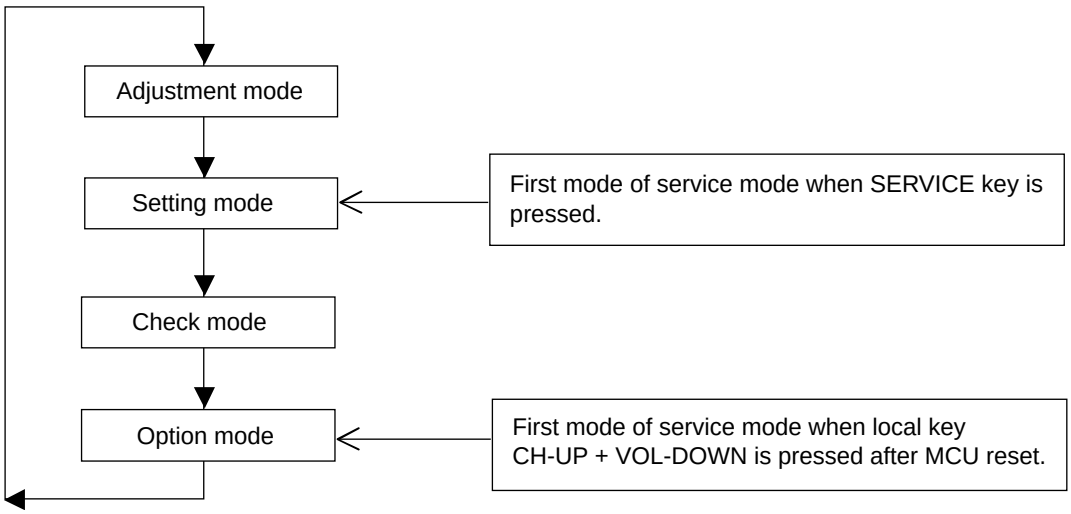
Adjustment mode
Setting mode
First mode of service mode when SERVICE key is pressed.
Check mode
Option mode
First mode of service mode when local key CH-UP + VOL-DOWN is pressed after MCU reset.

6. AFT processing is disabled during service mode. PLL setting data is set to fo data.
7. All user data are set to default during service mode. FAO and SPEAKER user settings are off and on respectively in service mode. Energy Save is off.
8. Sleep timer, View timer, On timer and OFF timer are inactivated in Service mode.
9. Sound is muting in service mode except at Adjustment Items V20, M01, M03, M04, M05, and M06.

Adjustment Mode Items

No.	Item Name	IC	Register	Range	Default
V01	SUB-PICTURE	1 Chip	CONTRAST	0~127	127
V02	SUB-TINT	1 Chip	TINT	0~127	64
V03	SUB-COLOR	1 Chip	COLOR	0~127	64
V04	SUB-BRIGHT	1 Chip	BRIGHT	0~255	128
V05	SUB-SHARP	1 Chip	VIDEO-TONE	0~63	32
V06	V-SHIFT	1 Chip	V-SHIFT	0~7	4
V07	H-SHIFT	1 Chip	H-PHASE	0~31	16
V08	RF-AGC	1 Chip	RF-DELAY	0~127	127
V09	V-SIZE	1 Chip	V-SIZE	0~63	32
V10	PIF-VCO	1 Chip	VIF-VCO	0~63	32
V11	R-CUTOFF	1 Chip	R-CUTOFF	0~255	127
V12	G-CUTOFF	1 Chip	G-CUTOFF	0~255	127
V13	B-CUTOFF	1 Chip	B-CUTOFF	0~255	127
V14	R-DRIVE	1 Chip	R-DRIVE	0~127	64
V15	B-DRIVE	1 Chip	B-DRIVE	0~127	64
V16	SUB-COLOR(YUV)	1 Chip	COLOR	0~127	64
V17	SUB-TINT(YUV)	1 Chip	BASEBAND-TINT	0~127	64
V18	CC-POS	MICON	CC-POS	0~255	32
V19	SCREEN CUT OFF	1 Chip	CUT OFF	0~2	0
V20	SUB-VOL	1 Chip	A-ATT	0~127	127
V21	H-VCO	1 Chip	H-VCO	0~7	4
M01	MTS-ATT	MTS	ATT (MTS)	0~15	10
M02	MTS-VCO	MTS	VCO (MTS)	0~63	32
M03	MTS-FILTER	MTS	FILTER (MTS)	0~63	28
M04	MTS-WIDEBAND	MTS	WIDEBAND (MTS)	0~63	27
M05	MTS-SPECTRAL	MTS	SPECTRAL (MTS)	0~63	32
M06	SUB-VOL	MTS	VOL (MTS)	0~63	63

■ SELF ADJUSTMENT

H-VCO

1. When there is H-VCO self-adjustment key input for adjustment item H-VCO, self-adjustment is performed.
2. H-FREE(1chip) is set to 1.
3. H-OUT is set by intelligent monitor output.
4. IM input is set as TIM input.
5. H-VCO(1chip) data is changed so that the number of input pulse is 125 inside 8ms interval.
6. When adjustment completed, OSD display and H-VCO self-adjustment status data of EEPROM are updated.
7. H-FREE(1chip), intelligent monitor output and IM input mode are recovered.

RF-AGC

1. When there is RF-AGC self-adjustment key input for adjustment item RF-AGC, self-adjustment is performed.
2. AGC-OUT is set by intelligent monitor output.
3. IM input is set as AD input.
4. By decreasing RF-AGC (1chip) data from current RF-AGC adjustment value to 0, AFT input voltage becomes the maximum setting value.
5. Increase RF-AGC(1chip) data, when AFT input voltage is at (max. 0.3V) point, adjustment is completed.
6. When adjustment completed, OSD display and RF-AGC self-adjustment status data of EEPROM are updated.
7. Intelligent monitor output and IM input mode are recovered.

PIF-VCO

1. When there is PIF-VCO self-adjustment key input for adjustment item PIF-VCO, self-adjustment is performed.
2. VIF-DEF(1chip) is set to 1.
3. AFC is set by intelligent monitor output.
4. IM input is set as AD input.
5. VIF-VCO(1chip) data is changed so that input voltage becomes 2.5V.
6. When adjustment completed, OSD display and PIF-VCO self-adjustment status data of EEPROM are updated.
7. VIF-DEF(1chip), intelligent monitor output and IM input mode are recovered.

Setting Mode Items

No.	Item Name	IC	Register	Range	Default
F01	VIDEO TONE -GAIN (TV)	1 Chips	V-TONE	0/1	0
F02	VIDEO TONE -GAIN (AV)	1 Chips	V-TONE	0/1	0
F03	VIDEO TONE -GAIN (S-AV)	1 Chips	V-TONE	0/1	0
F04	VIDEO TONE -GAIN(YUV)	1 Chips	V-TONE	0/1	0
F05	ABCL	1 Chips	ABCL	0/1	0
F06	BS	1 Chips	BS-OFF	0/1	0
F07	ABCL-G	1 Chips	ABCL-G	0/1	0
F08	SHP-AV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F09	SHP-SAV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F10	SHP-YUV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F11	RGB-CLIP	1 Chips	EXTRGB-CLIP	0/1	0
F12	E-SAVE	OFFSET	CONTRAST(OFFSET)	0~63	30
F13	FAO-VOL	1 Chips	A-ATT	0~127	120
F14	PIF-G	1 Chips	VIF-GAIN	0~7	4
F15	Y-DELAY(TV)	1 Chips	Y-DELAY	0~7	0
F16	Y-DELAY(AV)	1 Chips	Y-DELAY	0~7	0
F17	Y-DELAY(SAV)	1 Chips	Y-DELAY	0~7	0
F18	Y-DELAY(YUV)	1 Chips	Y-DELAY	0~7	0
F19	TINT-AV	OFFSET	TINT(OFFSET)	-32~+32	0
F20	TINT-SAV	OFFSET	TINT(OFFSET)	-32~+32	0
F21	COL-AV	OFFSET	COLOR(OFFSET)	-32~+32	0
F22	COL-SAV	OFFSET	COLOR(OFFSET)	-32~+32	0
F23	R-DRI(R2)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F24	R-DRI(R)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F25	R-DRI(B)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F26	B-DRI(R2)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F27	B-DRI(R)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F28	B-DRI(B)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F29	V-FREE	1 Chips	V-FREE	0/1	0
F30	GAMMA	1 Chips	GAMMA	0~3	0
F31	TRAP(TV)	1 Chips	TRAP-FINE	0~3	2
F32	TRAP(AV)	1 Chips	TRAP-FINE	0~3	2
F33	H-FREE	1 Chips	H-FREE	0/1	0
F34	1W(TV)	1 Chips	V.WINDOW	0/1	0
F35	1W(AV)	1 Chips	V.WINDOW	0/1	0
F36	YLPF	1 Chips	YSW-LPF	0/1	1
F37	BS-D	1 Chips	BS-DISCHARGE	0~3	0
F38	BS-C	1 Chips	BS-CHARGE	0~3	0
F39	SL(TV)	1 Chips	S-SLICE DOWN	0~3	0
F40	SL(AV)	1 Chips	S-SLICE DOWN	0~3	0
F41	SL(SAV)	1 Chips	S-SLICE DOWN	0~3	0
F42	SL(YUV)	1 Chips	S-SLICE DOWN	0~3	0
F43	AFC2	1 Chips	AFC2-G	0/1	0
F44	VD(TV)	1 Chips	VSYNC-DET	0/1	0
F45	VD(AV)	1 Chips	VSYNC-DET	0/1	0
F46	AS(TV)	1 Chips	AUTO-SLICE	0/1	0
F47	AS(AV)	1 Chips	AUTO-SLICE	0/1	0
F48	AS(SAV)	1 Chips	AUTO-SLICE	0/1	0
F49	AS(YUV)	1 Chips	AUTO-SLICE	0/1	0
F50	FBP(TV)	1 Chips	FBP VTH	0/1	0
F51	FBP(AV)	1 Chips	FBP VTH	0/1	0
F52	FBP(SAV)	1 Chips	FBP VTH	0/1	0
F53	FBP(YUV)	1 Chips	FBP VTH	0/1	0
F54	C.CLIP LEVEL	1 Chips	C.CLIP LEVEL	0/1	0

Setting Mode Items (Continued)

No.	Item Name	IC	Register	Range	Default
F55	PSW	MTS	PSW	0/1	0
F56	FAO-VOL	MTS	VOL	0~63	60
F57	CP	PLL	CHARGE PUMP	0/1	0
F58	CC LEVEL	MICON	CC LEVEL	0/1	0
F59	OSD POS	MICON	OSD POS	0/1	0
F60	OFFSET-ADJ-COL	1 Chips	COLOR	-32~+32	0
F61	OFFSET-ADJ-TINT	1 Chips	TINT	-32~+32	0
F62	OFFSET-ADJ-TINT-YUV	1 Chips	BASEBAND-TINT	-32~+32	0
F63	WAIT MD TIMER	1 Chips	SLOW MODE	0/1	1
F64	R-CUT-YUV	1 Chips	R-CUT(OFFSET)	-63~+63	0
F65	G-CUT-YUV	1 Chips	G-CUT(OFFSET)	-63~+63	0
F66	B-CUT-YUV	1 Chips	B-CUT(OFFSET)	-63~+63	0
F67	R-DRI-YUV	1 Chips	R-DRI(OFFSET)	-63~+63	0
F68	B-DRI-YUV	1 Chips	B-DRI(OFFSET)	-63~+63	0
F69	CONTRAST OFFSET	1 Chips	CONTRAST(OFFSET)	-63~+63	0
F70	BRIGHTNESS OFFSET	1 Chips	BRIGHT(OFFSET)	-63~+63	0
F71	AV2 BRIGHTNESS OFFSET	1 Chips	BRIGHT(OFFSET)	-15~+15	7

Option Mode Items

No	OPTION FUNCTION	0	1	Default Data
001	DEMO	Without DEMO	With DEMO	1
002	DOWNLOAD	Without V-CHIP OP	With V-CHIP OP	1
003	V-CHIP	Without V-CHIP	With V-CHIP	1
004	SPEAKER	Without SPEAKER	With SPEAKER	1
005	FAO	Without FAO	With FAO	1
006	P.PREF	Without P.REF	With P.REF	1
007	UNIV+	Without UNIV+	With UNIV+	1
008	VIEW TIMER	Without VIEW TIMER	With VIEW TIMER	1
009	EZ-SETUP	EZ-SETUP	AUTO PRESET	0
010	PON-CH	Without POWER-ON	With POWER-ON	0
011	FAV-COL	FAV-COL	COL-TEMP	1
012	COMPONENT	Without COMPONENT	With COMPONENT	1
013	AV	Without AV	With AV	1
014	AV2	AV1 system	AV2 system	1
015	MTS	Without MTS	With MTS	1
016	TONE-CTRL	Without S-ADJ	With S-ADJ	1
017	AUTO-OFF	Without AUTO-OFF	With AUTO-OFF	1
018	INIT-LANG	ENGLISH	SPANISH	0
019	SETUP-FLAG	NO SET UP	AUTO SET UP	1
020	AV-FR	"0"=NO AV "1"=REAR "2"=FRONT "3"=REAR & FRONT		3
021	AV3/S-IN	Without AV3/S-IN	With AV3/S-IN	0
022	COMB	Without COMB	With COMB	0
023	AUTO-INPUT	Without AUTO-INPUT	With AUTO-INPUT	1
024	CLOCK	Without CLOCK	With CLOCK	0
025	LED	SEMEX MODEL	SPC MODEL	0
026	FLAT	Not FLAT MODEL	FLAT MODEL	1
027	BASS BOOST	Without BASS BOOST	With BASS BOOST	0
028	DSE	Without DSE	With DSE	0
029	SRS	Without SRS	With SRS	0
030	WHITE-OUT	Without WHITE-OUT	With WHITE-OUT	0

Check Mode

Micron mask version, software version and ROM correction function status are displayed in check mode.

ADJUSTMENT METHOD

Caution: to get into the service mode, one of the ways is press direct key for service items. the other ways is short the main chassis JA301 and JA410

There is three stage of Service Mode data
First stage data from V01 ~ M06
to go into second stage of service mode data, press MENU key
Second stage data from F01 ~ F71
to go into third stage of service mode data, press MENU key
Third stage data from 001 ~ 030

Below is the contents of these data

First Stage

Data	Service Mode	Function	Range	Default Data
V01	SUB-PICTURE	CONTRAST	0~127	127
V02	SUB-TINT	TINT	0~127	64
V03	SUB-COLOR	COLOR	0~127	64
V04	SUB-BRIGHT	BRIGHT	0~255	128
V05	SUB-SHARP	VIDEO-TONE	0~63	32
V06	V-SHIFT	V-SHIFT	0~7	4
V07	H-SHIFT	H-PHASE	0~31	16
V08	RF-AGC	RF-DELAY	0~127	127
V09	V-SIZE	V-SIZE	0~63	32
V10	PIF-VCO	VIF-VCO	0~63	32
V11	R-CUTOFF	R-CUTOFF	0~255	127
V12	G-CUTOFF	G-CUTOFF	0~255	127
V13	B-CUTOFF	B-CUTOFF	0~255	127
V14	R-DRIVE	R-DRIVE	0~127	64
V15	B-DRIVE	B-DRIVE	0~127	64
V16	SUB-COLOR(YUV)	COLOR	0~127	64
V17	SUB-TINT(YUV)	BASEBAND-TINT	0~127	64
V18	CC-POS	CC-POS	0~255	32
V19	SCREEN CUT OFF	CUT OFF	0~2	0
V20	SUB-VOL	A-ATT	0~127	127
V21	H-VCO	H-VCO	0~7	4
M01	MTS-ATT	ATT (MTS)	0~15	10
M02	MTS-VCO	VCO (MTS)	0~63	32
M03	MTS-FILTER	FILTER (MTS)	0~63	28
M04	MTS-WIDEBAND	WIDEBAND (MTS)	0~63	27
M05	MTS-SPECTRAL	SPECTRAL (MTS)	0~63	32
M06	SUB-VOL	VOL (MTS)	0~63	63

Auto Adjustment Item
1. H-VCO
2. RF-AGC
3. PIF-VCO

Second Stage

Data	Service Mode	Function	Range	Default Data
F01	VIDEO TONE -GAIN (TV)	V-TONE	0/1	0
F02	VIDEO TONE -GAIN (AV)	V-TONE	0/1	0
F03	VIDEO TONE -GAIN (S-AV)	V-TONE	0/1	0
F04	VIDEO TONE -GAIN(YUV)	V-TONE	0/1	0
F05	ABCL	ABCL	0/1	0
F06	BS	BS-OFF	0/1	0
F07	ABCL-G	ABCL-G	0/1	0
F08	SHP-AV	VIDEO-TONE(OFFSET)	-16~+16	0
F09	SHP-SAV	VIDEO-TONE(OFFSET)	-16~+16	0
F10	SHP-YUV	VIDEO-TONE(OFFSET)	-16~+16	0
F11	RGB-CLIP	EXTRGB-CLIP	0/1	0
F12	E-SAVE	CONTRAST(OFFSET)	0~63	30
F13	FAO-VOL	A-ATT	0~127	120
F14	PIF-G	VIF-GAIN	0~7	4
F15	Y-DELAY(TV)	Y-DELAY	0~7	0
F16	Y-DELAY(AV)	Y-DELAY	0~7	0
F17	Y-DELAY(SAV)	Y-DELAY	0~7	0
F18	Y-DELAY(YUV)	Y-DELAY	0~7	0
F19	TINT-AV	TINT(OFFSET)	-32~+32	0
F20	TINT-SAV	TINT(OFFSET)	-32~+32	0
F21	COL-AV	COLOR(OFFSET)	-32~+32	0
F22	COL-SAV	COLOR(OFFSET)	-32~+32	0
F23	R-DRI(R2)	R-DRI(OFFSET)	-32~+32	0
F24	R-DRI(R)	R-DRI(OFFSET)	-32~+32	0
F25	R-DRI(B)	R-DRI(OFFSET)	-32~+32	0
F26	B-DRI(R2)	B-DRI(OFFSET)	-32~+32	0
F27	B-DRI(R)	B-DRI(OFFSET)	-32~+32	0
F28	B-DRI(B)	B-DRI(OFFSET)	-32~+32	0
F29	V-FREE	V-FREE	0/1	0
F30	GAMMA	GAMMA	0~3	0
F31	TRAP(TV)	TRAP-FINE	0~3	2
F32	TRAP(AV)	TRAP-FINE	0~3	2
F33	H-FREE	H-FREE	0/1	0
F34	1W(TV)	V.WINDOW	0/1	0
F35	1W(AV)	V.WINDOW	0/1	0
F36	YLPF	YSW-LPF	0/1	1
F37	BS-D	BS-DISCHARGE	0~3	0
F38	BS-C	BS-CHARGE	0~3	0
F39	SL(TV)	S-SLICE DOWN	0~3	0
F40	SL(AV)	S-SLICE DOWN	0~3	0
F41	SL(SAV)	S-SLICE DOWN	0~3	0
F42	SL(YUV)	S-SLICE DOWN	0~3	0
F43	AFC2	AFC2-G	0/1	0
F44	VD(TV)	VSYNC-DET	0/1	0
F45	VD(AV)	VSYNC-DET	0/1	0
F46	AS(TV)	AUTO-SLICE	0/1	0
F47	AS(AV)	AUTO-SLICE	0/1	0
F48	AS(SAV)	AUTO-SLICE	0/1	0
F49	AS(YUV)	AUTO-SLICE	0/1	0
F50	FBP(TV)	FBP VTH	0/1	0
F51	FBP(AV)	FBP VTH	0/1	0
F52	FBP(SAV)	FBP VTH	0/1	0
F53	FBP(YUV)	FBP VTH	0/1	0
F54	C.CLIP LEVEL	C.CLIP LEVEL	0/1	0
F55	PSW	PSW	0/1	0
F56	FAO-VOL	VOL	0~63	60

Second Stage (Continued)

Data	Service Mode	Function	Range	Default Data
F57	CP	CHARGE PUMP	0/1	0
F58	CC LEVEL	CC LEVEL	0/1	0
F59	OSD POS	OSD POS	0/1	0
F60	OFFSET-ADJ-COL	COLOR	-32~+32	0
F61	OFFSET-ADJ-TINT	TINT	-32~+32	0
F62	OFFSET-ADJ-TINT-YUV	BASEBAND-TINT	-32~+32	0
F63	WAIT MD TIMER	SLOW MODE	0/1	1
F64	R-CUT-YUV	R-CUT(OFFSET)	-63~+63	0
F65	G-CUT-YUV	G-CUT(OFFSET)	-63~+63	0
F66	B-CUT-YUV	B-CUT(OFFSET)	-63~+63	0
F67	R-DRI-YUV	R-DRI(OFFSET)	-63~+63	0
F68	B-DRI-YUV	B-DRI(OFFSET)	-63~+63	0
F69	CONTRAST OFFSET	CONTRAST(OFFSET)	-63~+63	0
F70	BRIGHTNESS OFFSET	BRIGHT(OFFSET)	-63~+63	0
F71	AV2 BRIGHTNESS OFFSET	BRIGHT(OFFSET)	-15~+15	7

Third Stage

Data	OPTION FUNCTION	DATA = "0"	DATA ="1"	Default Data
001	DEMO	DEMO DISABLE	ENABLE	1
002	DOWNLOAD	V-CHIP OP DISABLE	ENABLE	1
003	V-CHIP	V-CHIP DISABLE	ENABLE	1
004	SPEAKER	SPEAKER DISABLE	ENABLE	1
005	FAO	FAO DISABLE	ENABLE	1
006	P.PREF	P.REF DISABLE	ENABLE	1
007	UNIV+	UNIV+ DISABLE	ENABLE	1
008	VIEW TIMER	VIEW TIMER DISABLE	ENABLE	1
009	EZ-SETUP	EZ-SETUP	AUTO PRESET	0
010	* PON-CH	POWER-ON DISABLE	ENABLE	0
011	FAV-COL	FAV-COL	COL-TEMP	1
012	COMPONENT	COMPONENT DISABLE	ENABLE	1
013	AV	AV DISABLE	ENABLE	1
014	AV2	AV1	AV2	1
015	MTS	MTS DISABLE	ENABLE	1
016	TONE-CTRL	S-ADJ DISABLE	ENABLE	1
017	AUTO-OFF	AUTO-OFF DISABLE	ENABLE	1
018	INIT-LANG	ENGLISH	SPANISH	0
019	SETUP-FLAG	NO SET UP	AUTO SET UP	1
020	AV-FR	"0"=NO AV "1"=REAR "2"=FRONT "3"=REAR & FRONT		3
021	AV3/S-IN	AV3/S-IN DISABLE	ENABLE	0
022	COMB	COMB DISABLE	ENABLE	0
023	AUTO-INPUT	AUTO-INPUT DISABLE	ENABLE	1
024	CLOCK	CLOCK DISABLE	ENABLE	0
025	LED	SEMEX MODEL	SPC MODEL	0
026	FLAT	FLAT DISABLE	ENABLE	1
027	BASS BOOST	BASS BOOST DISABLE	ENABLE	0
028	DSE	DSE DISABLE	ENABLE	0
029	SRS	SRS DISABLE	ENABLE	0
030	WHITE-OUT	WHITE-OUT DISABLE	ENABLE	0

*POWER ON BY CH-UP/CH-DOWN KEY

ADJUSTMENT ITEM	OPTION SET UP		
ADJUSTMENT POSITION	REFER AS BELOW	STEP RANGE	REFER AS BELOW
CONTROL	–		
PRE-ADJUST REQUIREMENT	–		
CONTENT	–		
INPUT CONDITION	20F650		
OUTPUT	OSD CHECKING		

ADJUSTMENT PROCEDURE

BUS OPTION FOR THIRD STAGE SERVICE DATA

FUNCTION	001 DEMO	002 DOWNLOAD	003 V-CHIP	004 SP	005 FAO	006 P.PREF	007 UNIV+	008 VIEW	009 EZ	010 PON-CH
20F650	1	1	1	1	1	1	1	1	0	0
DEF	**"0"=DISABLE "1"=ENABLE** 009 → "0"=EZ-SETUP "1"=AUTO PRESET									

BUS OPTION FOR THIRD STAGE SERVICE DATA

FUNCTION	011 FAV-COL	012 COMP	013 AV	014 AV2	015 MTS	016 TONE	017 AUTO	018 LAN	019 SETUP	020 AV-FR
20F650	1	1	1	1	1	1	1	0	1	3

FUNCTION	021 AV3	022 COMB	023 A-IN	024 CLOCK	025 LED	026 FLAT	027 BASS	028 DSE	029 SRS	030 WHITE
20F650	0	0	1	0	0	1	0	0	0	0
DEF	011 → "0"=FAV-COL "1"=COL-TEMP 018 → "0"=ENGLISH "1"=SPANISH 019 → "0"=NO SET UP "1"=AUTO SETUP 025 → "0"=SEMEX SPEC "1"=SPC SPEC									

HISTORY OF REVISION	SYMBOL	REVISED CONTENT,

ADJUSTMENT ITEM	BUS SET UP		
ADJUSTMENT POSITION	REFER AS BELOW	STEP RANGE	REFER AS BELOW
CONTROL	–		
PRE-ADJUST REQUIREMENT	–		
CONTENT	–		
INPUT CONDITION	20F650		
OUTPUT	OSD CHECKING		

ADJUSTMENT PROCEDURE

DATA SETUP FOR FIRST AND SECOND STAGE SERVICE DATA

FUNCTION	V05 SHARP	F15 Y-DL(TV)	F16 Y-DL(AV)	F19 TINT-AV	F21 COL-AV	F23 R-D(R2)	F24 R-D(R)	F25 R-D(B)	F26 B-D(R2)	F27 B-D(R)	F28 B-D(B)
20F650	50	5	2	-7	4	+8	+3	-2	-18	-8	+6
DEF											

DATA SETUP FOR FIRST AND SECOND STAGE SERVICE DATA

FUNCTION	F30 GAMMA	F35 1W(AV)	F39 SL(TV)	F40 SL(AV)	F44 VD(TV)	F46 AS(TV)	F47 AS(AV)	F56 FAO-VOL	F57 CP	F60 C-OF	F61 TINT-OF
20F650	1	1	1	1	1	1	1	58	1	+10	+8

FUNCTION	F62 TI-YUV	F66 G-C-YUV	F67 B-C-YUV	F71 AV2 Brightness							
20F650	-12	+36	+2	0							
DEF											

HISTORY OF REVISION	SYMBOL	REVISED CONTENT,

ADJUSTMENT ITEM	H-POSITION		
ADJUSTMENT POSITION	V07	STEP RANGE	0-31
CONTROL	I^2C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, CRT-PURITY		
CONTENT	US 4 CH LION HEAD (MONOSCOPE)		
INPUT CONDITION	AC 120V, US MAGNETIC FIELD		
OUTPUT	CONFIRMATION BY CRT SCREEN		
ADJUSTMENT PROCEDURE	1. ADJUST THE **V07** BUS DATA TO HAVE A BALANCE POSITION TO SPEC OF **A=B**. 2. IF CANNOT MAKE IT TO **A=B**, ADJ FROM THE BEST POINT SO THAT **B** SLIDELY SMALLER THAN **A** 		
	[CHECKING SPEC] LEFT AND RIGHT SYMMETRICAL		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	V-SIZE		
ADJUSTMENT POSITION	V09	STEP RANGE	0~63
CONTROL	I^2C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, CRT PURITY, V-PHASE, +B ADJUST		
CONTENT	US 4 CH LION HEAD		
INPUT CONDITION	AC120V		
OUTPUT	CONFIRMATION BY CRT SCREEN		
ADJUSTMENT PROCEDURE	ADJUST THE V09 BUS DATA UNTILL THE OVERSCAN BECOME AS SPECIFIED BELOW. CAUTION: - PLEASE AGING TV MORE THAN 10 MINUTES BEFORE ADJUSTMENT.		
	[CHECKING SPEC] OVERSCAN 10 ± 2.5%		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	V-PHASE		
ADJUSTMENT POSITION	V06	STEP RANGE	0-7
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, CRT-PURITY		
CONTENT	US 4 CH LION HEAD (MONOSCOPE PATTERN)		
INPUT CONDITION	120V, RF INPUT, ZERO MAGNETIC FIELD		
OUTPUT	CONFIRMATION ON CRT SCREEN		
ADJUSTMENT PROCEDURE	ADJUST V06 BUS DATA TO HAVE MOST ACCEPTABLE VERTICAL POSITION. THE MONOSCOPE PATTERN SHOULD BE BALANCE IN VERTICAL POSITION **NOTE: THE DATA FOR V06 LIMIT AT <= 04, EVEN POSITION GOOD ENOUGH**		
	[CHECKING CONFIRMATION]		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	CLOSED CAPTION SET UP		
ADJUSTMENT POSITION	V18	STEP RANGE	0~255
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP		
CONTENT	US 4 CH LION HEAD		
INPUT CONDITION	AC 120V		
OUTPUT	CONFIRMATION ON CRT DISPLAY.		
ADJUSTMENT PROCEDURE	1) BY SELECTING THE **V18**, BOX BLK TEXT WILL BE APPEARED. 2) ADJUST THE **V18** BUS DATA TO HAVE A BALANCE POSITION TO SPEC OF A=B. 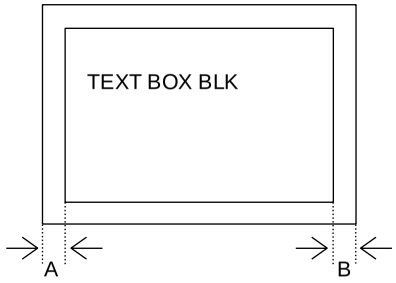 		
	[CHECKING SPEC] LEFT AND RIGHT SYMMETRICAL		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	H-VCO		
ADJUSTMENT POSITION	V21	STEP RANGE	0-7
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP		
CONTENT	NO SIGNAL (RASTER) CONDITION		
INPUT CONDITION	AC 120V		
OUTPUT	IC 801 PIN 11		
ADJUSTMENT PROCEDURE	**(MANUAL ADJ)** 1) GO TO SERVICE MODE, 2) GO TO SERVICE DATA **V21**, ADJ UNTIL FREQ AS BELOW **(SELF ADJ)** 1) GO TO SERVICE MODE,BY SELECTING THE SERVICE DATA **V21** 2) PRESS THE R/C TO OPERATE AUTO H-VCO,OSD APPEAR "OK" AT SCREEN 3) IF APPEAR "NG" PLS REPEAT STEP2		
	[CHECKING SPEC] **FREQ = 15.735 ± 0.2 KHz**		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	PIF-VCO		
ADJUSTMENT POSITION	V10	STEP RANGE	0~63
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP		
CONTENT	NO SIGNAL (RASTER) CONDITION		
INPUT CONDITION	AC 120V		
OUTPUT	CONFIRMATION ON CRT DISPLAY (AUTO), IC801 PIN 2 VOLTAGE (MANUAL).		
ADJUSTMENT PROCEDURE	**(AT SELF ADJUSTMENT MODE)** 1) GO INTO SERVICE MODE, BY SELECTING THE SERVICE DATA V10 2) PRESS THE R/C FOR AUTO PIF-VCO KEY, OSD APPEAR “OK” AT SCREEN 3) IF APPEAR “NG” PLS REPEAT STEP2 **(AT MANUAL ADJUSTMENT MODE)** 1) GO INTO SERVICE MODE, BY SELECTING THE SERVICE DATA V10 2) ADJUST THE DATA UP/DOWN UNTIL IC801 PIN 2 VOLTAGE BECOME AS SPECIFIED BELOW		
	[CHECKING SPEC] 2.5 ± 0.5 V DC (CHECKING SPEC : 2.50 ± 1.5V)		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	RF-AGC		
ADJUSTMENT POSITION	V08	STEP RANGE	0-127
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP		
CONTENT	US10CH HALF COLOR BAR		
INPUT CONDITION	RF INPUT FIELD STRENGTH **56dBμV** (FIX)		
OUTPUT	TUNER AGC TERMINAL (TP 201) OR CRT DISPLAY CONFIRMATION		
ADJUSTMENT PROCEDURE	**(AT SELF ADJUSTMENT MODE)** 1. GO TO SERVICE MODE 2. GO TO SERVICE DATA **V08**, PRESS R/C TO OPEARATE AUTO-AGC KEY AND CONFIRM THE **OK** DISPLAY ON THE SCREEN. 3. IF APPEAR NG PLS REPEAT STEP 2 AGAIN. **(AT MANUAL ADJUSTMENT MODE)** 1. ADJUST THE V08 BUS DATA UNTIL AGC TERMINAL VOLTAGE BE-COME MAXIMUM, THEN DROP 0.1V BELOW MAXIMUM VOLTAGE. 2. CHANGE THE ANTENNA INPUT SIGNAL TO 63-67 dBμV, AND MAKE SURE THERE IS NO NOISE 3. CHANGE THE ANTENNA INPUT SIGNAL TO 90-95 dBμV TO BE SURE THAT THERE IS NO CROSS MODULATION BEAT.		
	[VOLTAGE CONFIRMATION] MAX - 0.1V dc		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SCREEN		
ADJUSTMENT POSITION	V11,V12,V13	STEP RANGE	0-255
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP		
CONTENT	WINDOW PATTERN OR US4CH LION HEAD		
INPUT CONDITION	120V		
OUTPUT	CONFIRMATION ON CRT DISPLAY		
ADJUSTMENT PROCEDURE	1) IN SERVICE MODE, SET **V04&V11&V12&V13** TO 127; **V14&V15** TO 64, GET IN Y-MUTE BY R/C AND SET **V19** TO “1”, PICTURE APPEAR IN CUT-OFF CONDITION 2) ADJUST THE SCREEN SO THAT CUT-OFF LINE APPEAR IN LOW BRIGHT, THEN JUDGE THAT WHETHER THE CUT-OFF LINE APPEAR IN RED OR GREEN OR BLUE COLOR, IN THIS CONDITION V11=R-CUTOFF, V12=G-CUTOFF, V13=B-CUT-OFF, FIX THE DATA OF THE COLOR APPEAR IN CUTOFF LINE AND USE R/C TO ADJUST THE OTHER TWO CUT-OFF DATA SO THAT CUT-OFF LINE COLOR BE-COME WHITE. 3) TURN THE SCREEN VR OF FBT SO THAT CUT-OFF LINE JUST DIS-APPEAR AND USE R/C TO SET **V19** TO “0”, NEXT DISABLE THE Y-MUTE SO THAT PICTURE APPEAR IN NORMAL MODE.		
	[VOLTAGE CONFIRMATION]		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	WHITE BALANCE		
ADJUSTMENT POSITION	V14,V15,V11,V12,V13	STEP RANGE	0-127, 0~255
CONTROL	I^2C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, SCREEN		
CONTENT	23CH 501RE WINDOW PATTERN		
INPUT CONDITION	120V		
OUTPUT	CRT SCREEN DISPLAY.		
ADJUSTMENT PROCEDURE	1) **WHITE** (HIGH BEAM) FIRST LET THE GUN POINT AT **BLACK** POSITION (AS DRAWING ATTACH), ADJ V04 UNTIL **BRIGHTNESS Y** BECOME **5 cd/m2**, THEN LET THE GUN POINT AT **WHITE** POSITION (AS DRAWING ATTACH), ADJUST **V01** UNTIL BRIGHTNESS Y BECOME **150 cd/m2**, ADJUST THE BUS DATA OF **V14** (R DRIVE), **V15**(B DRIVE) UNTIL THE AXIS OF COLOR TEMPERATURE BECOME **X=0.273, Y=0.280** 2) **BLACK** (LOW BEAM) LET THE GUN POINT AT BLACK POSITION, IF THE VALUE SHIFTED AWAY FROM THE DATA ADJUSTED IN STEP 1), ADJUST AGAIN THE TWO SERVICE DATA WHICH HAVE CHOSEN AT SCREEN ADJUST SO THAT TO OBTAIN THE SIMILAR AXIS AS ABOVE. ***WARNING:** DO NOT DISTURB THE MINI STEP GUN DATA DURING THIS ADJUSTMENT. **REPEAT STEP 1), 2) TO GET A REGULATED POSITION. 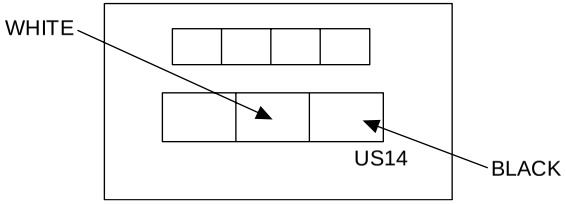 		
	[CHECKING CONFIRMATION] X=0.273, Y=0.280 (11,600°K + 1 MPCD)		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SUB-BRIGHT		
ADJUSTMENT POSITION	V04	STEP RANGE	0-255
CONTROL	I^2C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, SCREEN, WHITE BALANCE		
CONTENT	WINDOW PATTERN		
INPUT CONDITION	120V		
OUTPUT	CRT SCREEN DISPLAY.		
ADJUSTMENT PROCEDURE	1) LET THE GUN POINT AT BLACK POSITION (AS ATTACH DRAWING), ADJUST V04 BUS DATA UNTIL BRIGHTNESS Y=0.5 cd/m2, **THEN STEP DOWN MORE 4 STEP** 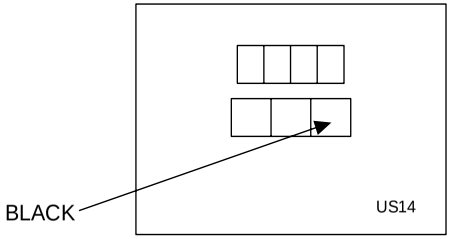 		
	[VOLTAGE CONFIRMATION] BRIGHTNESS Y=0.5 cd/m2, THEN STEP DOWN MORE 4 STEP		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SUB-PICTURE		
ADJUSTMENT POSITION	V01	STEP RANGE	0-127
CONTROL	I²C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, SCREEN, WHITE BALANCE, SUB-BRIGHTNESS		
CONTENT	WINDOW PATTERN		
INPUT CONDITION	120V		
OUTPUT	CRT SCREEN DISPLAY.		
ADJUSTMENT PROCEDURE	1) LET THE GUN POINT AT WHITE POSITION (AS ATTACH DRAWING), ADJUST **V01** BUS DATA UNTIL BRIGHTNESS Y=**150 cd/m2.** **NOTE: ALLOWABLE DATA FOR V01 IS >= 90, EVEN Y CAN'T MATCH THE SPEC** 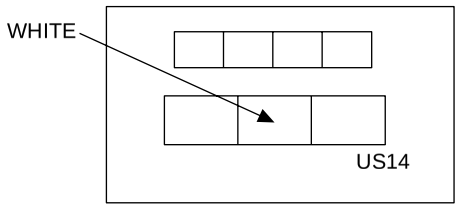 		
	[VOLTAGER CONFIRMATION] BRIGHTNESS Y=150 cd/m2		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SUB-TINT		
ADJUSTMENT POSITION	V02	STEP RANGE	0-127
CONTROL	I²C CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, VCO ADJ, RF-AGC		
CONTENT	US 10 CH HALF COLOR BAR PATTERN		
INPUT CONDITION	120V		
OUTPUT	B-AMP TR BASE (TP853) CONFIRRM WITH OSCILLOSCOPE		
ADJUSTMENT PROCEDURE	1) GET IN Y-MUTE FUNCTION BY R/C. 2) ADJUST THE **V02** BUS DATA TO GET A WAVEFORM AS BELOW. 3) DISABLE THE Y-MUTE **PLS TAKE NOTE THAT SERVICE MODE DATA F61 NEED TO SET +8 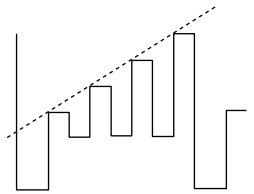 B-AMP BASE (TP853) MUST BE IN STEPPING LEVEL		
	[CONFIRMATION]		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SUB-COLOR		
ADJUSTMENT POSITION	V03	STEP RANGE	0-127
CONTROL	I^2C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, VCO ADJ, RF-AGC, **SUB-PICT, SUB-TNT**		
CONTENT	US 10 CH HALF COLOR BAR PATTERN		
INPUT CONDITION	120V		
OUTPUT	R-AMP TR BASE (TP851) CONFIRRM WITH OSCILLOSCOPE		
ADJUSTMENT PROCEDURE	1) SET THE **V03** BUS DATA TO GET A WAVEFORM AS BELOW 2) THIS WAVEFORM SHOWS THAT THE 75% WHITE & RED PORTIONS OF COLOR BAR BEAT AT THE SAME LEVEL *PLEASE TAKE NOTE THAT SERVICE DATA F60 MUST SET TO +10 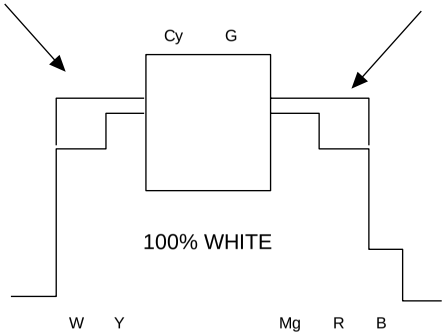 **[CHECKING CONFIRMATION]**		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	X-RAY PROTECTION OPERATING CONFIRMATION		
ADJUSTMENT POSITION	–	STEP RANGE	–
CONTROL	–		
PRE-ADJUST REQUIREMENT	AFTER ALL ADJUSTMENT FINISHED.		
CONTENT	US 4 CH LION HEAD (MONOSCOPE PATTERN)		
INPUT CONDITION	AC 120V, RF INPUT		
OUTPUT	CONFIRMATION BY THE CRT		
ADJUSTMENT PROCEDURE	SET THE USER CONTROL TO SHIPMENT POSITION. **[VOLTAGE CONFIRMATION]** CHECK THE VOLTAGE OF P603 PIN 3 AS SPECIFIED BELOW. **[OPERATION CONFIRMATION]** SUPPLY THE DC VOLTAGE TO P603 PIN 3 AND MAKE SURE THE PROTECTOR IS FUNCTIONED. HORIZONTAL OSCILATION STOP AND PICTURE DISAPPEAR. **[RECOVER INFORMATION]** PULL OUT THE AC CORD. **[CAUTION]** FROM THE RECOVER CONFIRMATION MENTIONED ABOVE, THE AC CODE MUST BE PULLED OUT AT LEAST 4 SECOND BEFORE PLUGGING IN AGAIN.(IN ORDER TO MAKE SURE THE μ-COM HAS BEEN RESET.)		
	[VOLTAGE CONFIRMATION] TP VOLTAGE: **19.8 ± 1.1V DC** OPERATION VOLTAGE: **25.5V**		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	HIGH VOLTAGE		
ADJUSTMENT POSITION	–	STEP RANGE	–
CONTROL	–		
PRE-ADJUST REQUIREMENT	AFTER ALL ADJUSTMENT FINISHED.		
CONTENT	US 4 CH LION HEAD (MONOSCOPE PATTERN)		
INPUT CONDITION	AC 120V, RF INPUT		
OUTPUT	CRT ANODE VOLTAGE		
ADJUSTMENT PROCEDURE	SET THE USER CONTROL TO SHIPMENT SETTING POSITION. PUSH ON Y-MUTE BY R/C CONFIRM THE VOLTAGE OF CRT ANODE BY HIGH VOLTAGE METER AND MAKE SURE THE READING IS AS BELOW. **HIGH VOLTAGE**: BELOW **30kV** **[CAUTION POINT]** USE ELECTROSTATIC HI-VOLTAGE METER AND FOLLOW THE UL/ DHHS STANDARD TO MAKE CORRECTION AND CONTROL.		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	MS LEVEL ADJUSTMENT		
ADJUSTMENT POSITION	M01	STEP RANGE	0~15
CONTROL	I^2C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, VCO ADJ, RF-AGC		
CONTENT	MONORAL SIGNAL (400HZ 100% MODULATION)		
INPUT CONDITION	AC 120V, RF INPUT		
OUTPUT	IC 3001 39 PIN		
ADJUSTMENT PROCEDURE	1) SET THE SOUND VOLUME CONTROL MORE THAN 1. 2) ADJUST BUS DATA OF **M01** UNTIL THE VOLTAGE OF 39 PIN BE-COME AS SPECIFIED BELOW. **[CHECKING SPEC]** 490 ± 10mVrms (CHECKING SPEC :490 ± 20mVrms)		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	SEPARTION ADJUSTMENT		
ADJUSTMENT POSITION	M04, M05	STEP RANGE	0~63
CONTROL	I²C BUS CONTROL		
PRE-ADJUST REQUIREMENT	OPTION SET UP, BUS SET UP, VCO ADJ, RF-AGC, MS-LEVEL, MTS-VCO, FILTER		
CONTENT	STEREO SIGNAL SIGNAL 1,: MODULATION 30%, L-CH ONLY, NR-ON, 300Hz SIGNAL 2,: MODULATION 30%, L-CH ONLY, NR-ON, 3kHz		
INPUT CONDITION	RF INPUT		
OUTPUT	IC 3001 39 PIN		
ADJUSTMENT PROCEDURE	1) INPUT SIGNAL 1, ADJUST BUS DATA OF **M04** UNTIL THE OF 39 PIN BECOME MINIMUM LEVEL. 2) INPUT SIGNAL 2, ADJUST BUS DATA OF **M05** UNTIL THE AC VOLTAGE OF 39 PIN BECOME MINIMUM LEVEL. 3) REPEAT STEP 1) AND 2). SET THE SOUND VOLUME TO MAXIMUM THEN MAKE SURE THE READING FROM THE SPEAKER TERMINAL MUST BE OVER THE SPEC AS SPECIFIED BELOW.		
	[CHECKING SPEC] OVER 25 dB (CHECKING SPEC : OVER 20 dB)		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	V-CHIP		
ADJUSTMENT POSITION	—	STEP RANGE	—
CONTROL	—		
PRE-ADJUST REQUIREMENT	AFTER ALL ADJUSTMENT FINISHED.		
CONTENT	UHF 15 CH (V-CHIP TRANSMISION SIGNAL CH)		
INPUT CONDITION	AC 120V, RF INPUT		
OUTPUT	CONFIRMATION BY THE CRT.		
ADJUSTMENT PROCEDURE	1) RECEIVE THE UHF 15 CH. 2) PUSH THE DISPLAY KEY (R/C), MAKE SURE THAT THE OSD. V-CHIP RATING DISPLAY IS EQUAVALENCE TO TRANSMISSION RATING.		
	[VOLTAGE COMFIRMATION]		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

ADJUSTMENT ITEM	TRI-VISION		
ADJUSTMENT POSITION	—	STEP RANGE	—
CONTROL	—		
PRE-ADJUST REQUIREMENT	AFTER ALL ADJUSTMENT FINISHED.		
CONTENT	RATING SYS. DOWNLOAD SIGNAL A/B (PRCC SIG) INCLUDED SIGNAL.		
INPUT CONDITION	AC 120V, RF INPUT		
OUTPUT	CONFIRMATION BY THE CRT SCREEN		
ADJUSTMENT PROCEDURE	**(DOWNLOADING CONFIRMATION)** 1) RECEIVE THE DOWNLOAD A SIGNAL. 2) SELECT V-CHIP CONTROL MENU THEN ON THE DOWNLOAD. 3) UNPLUG THE AC THEN PLUG AGAIN. 4) BACK TO V-CHIP CONTROL MENU, CHECK THE DOWNLOADED RATING AND NAME. **(UPLOADING CONFIRMATION)** 1) RECEIVE THE D		
	[COMFIRMATION]		
HISTORY OF REVISION	SYMBOL	REVISED CONTENT,	

CHASSIS LAYOUT

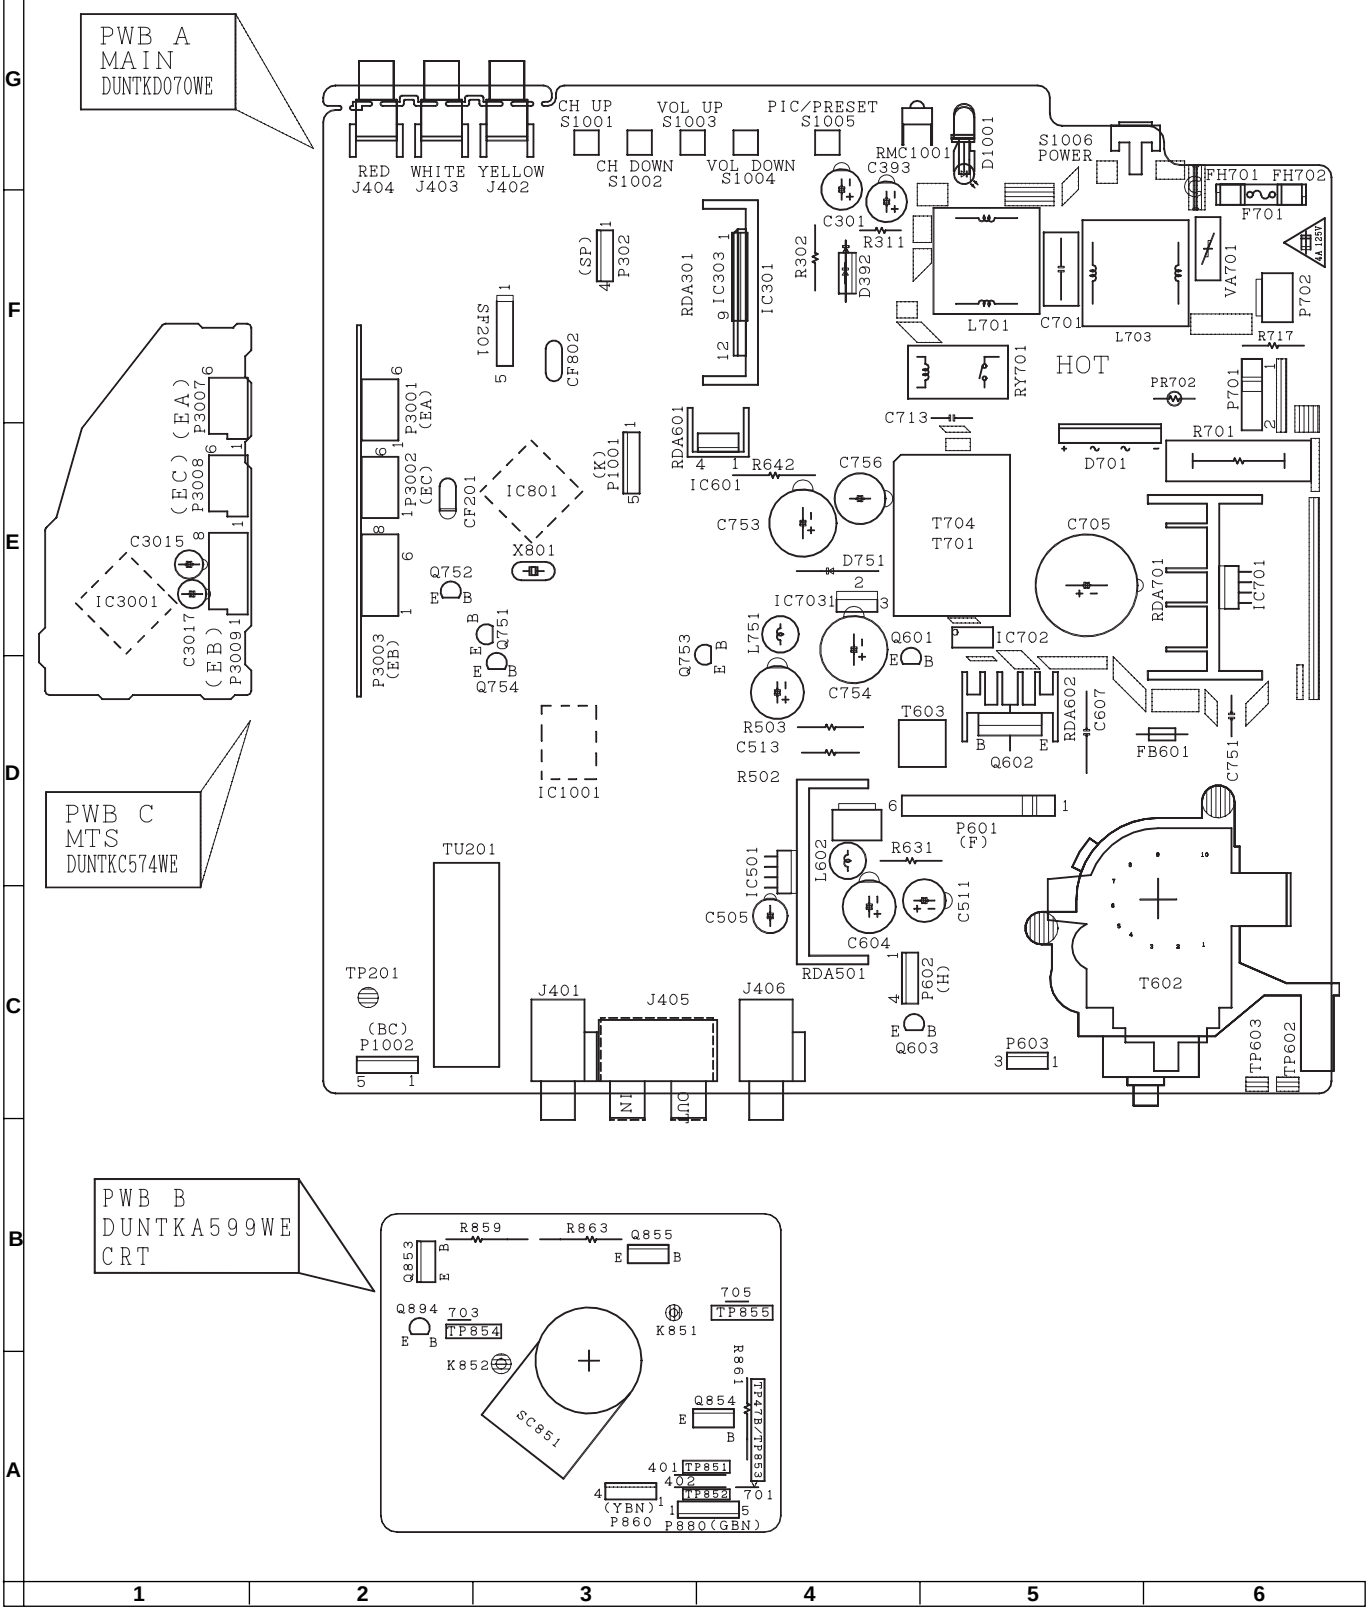

CRT BLOCK DIAGRAM

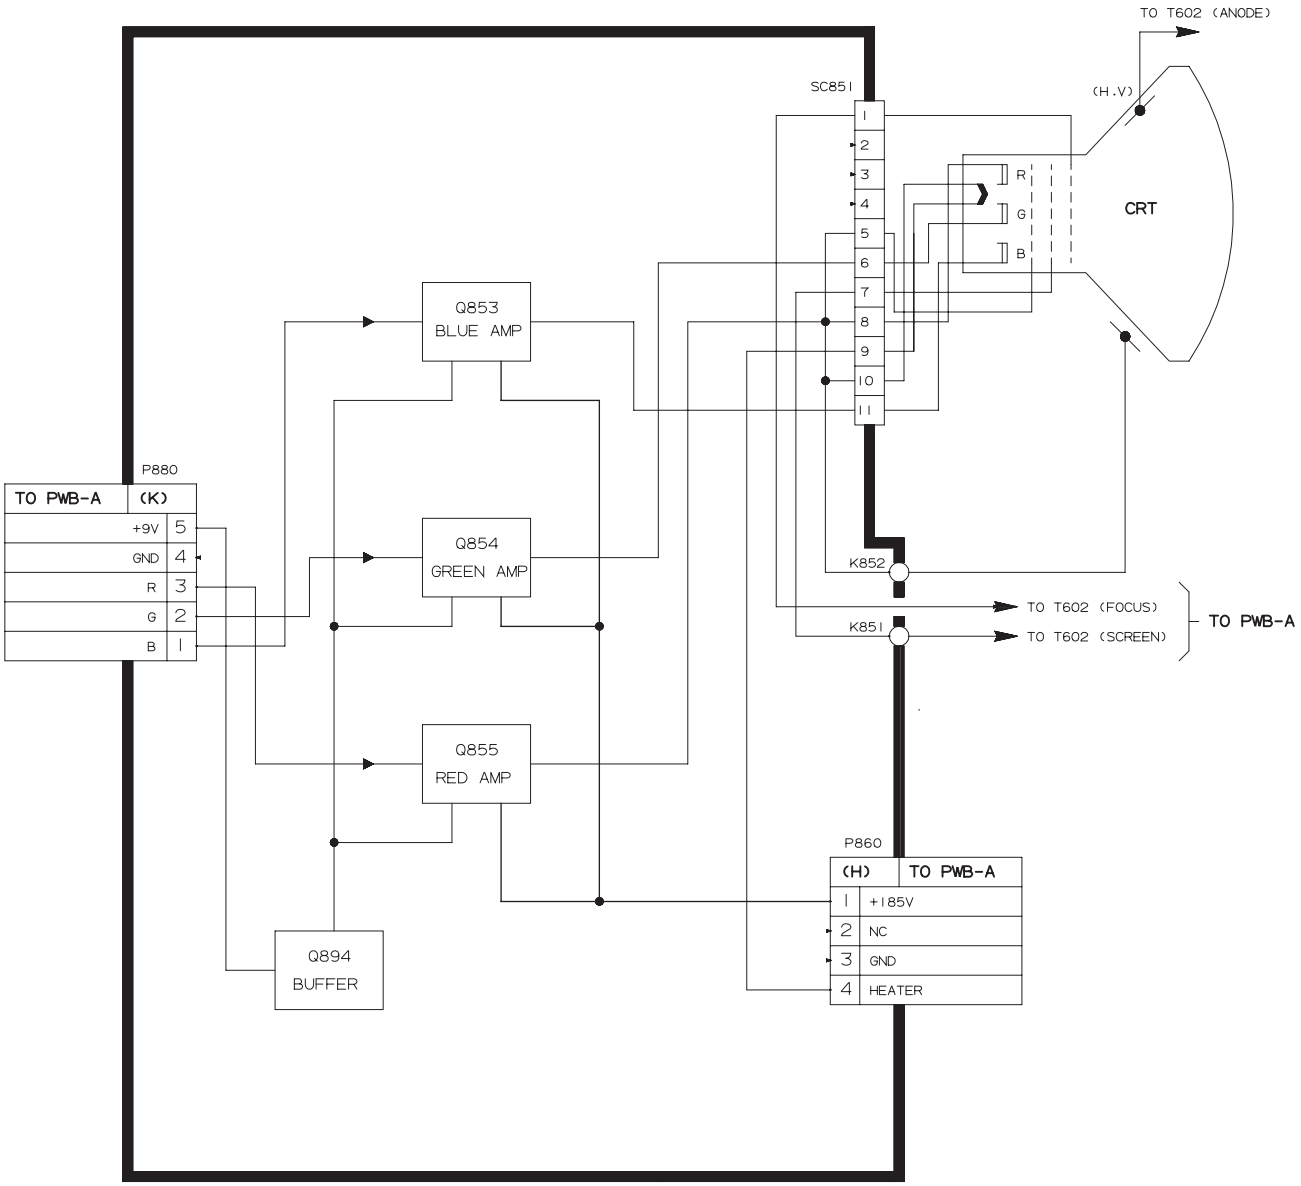

MAIN BLOCK DIAGRAM

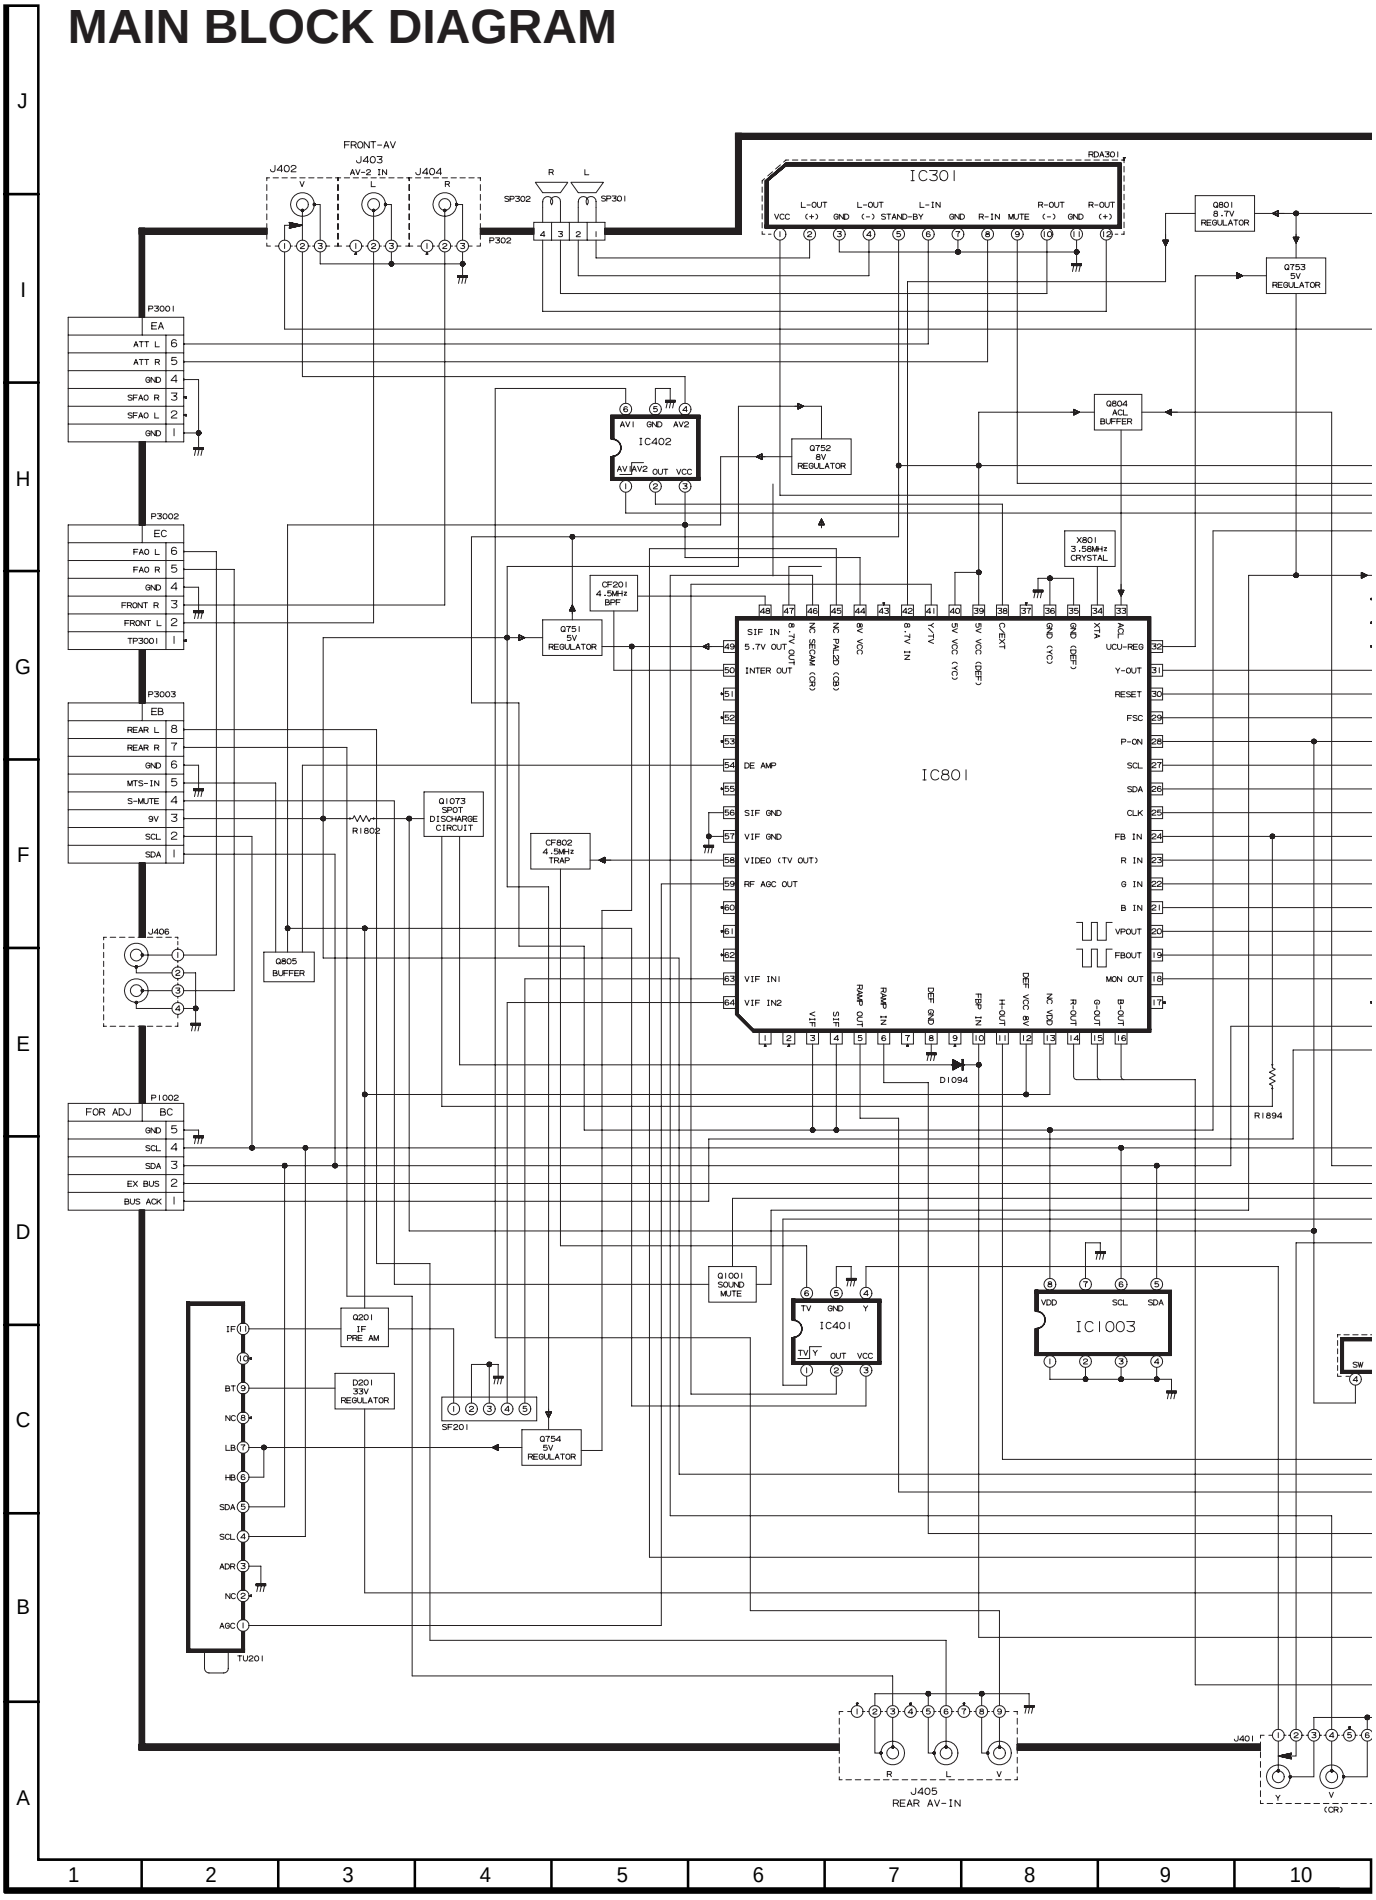

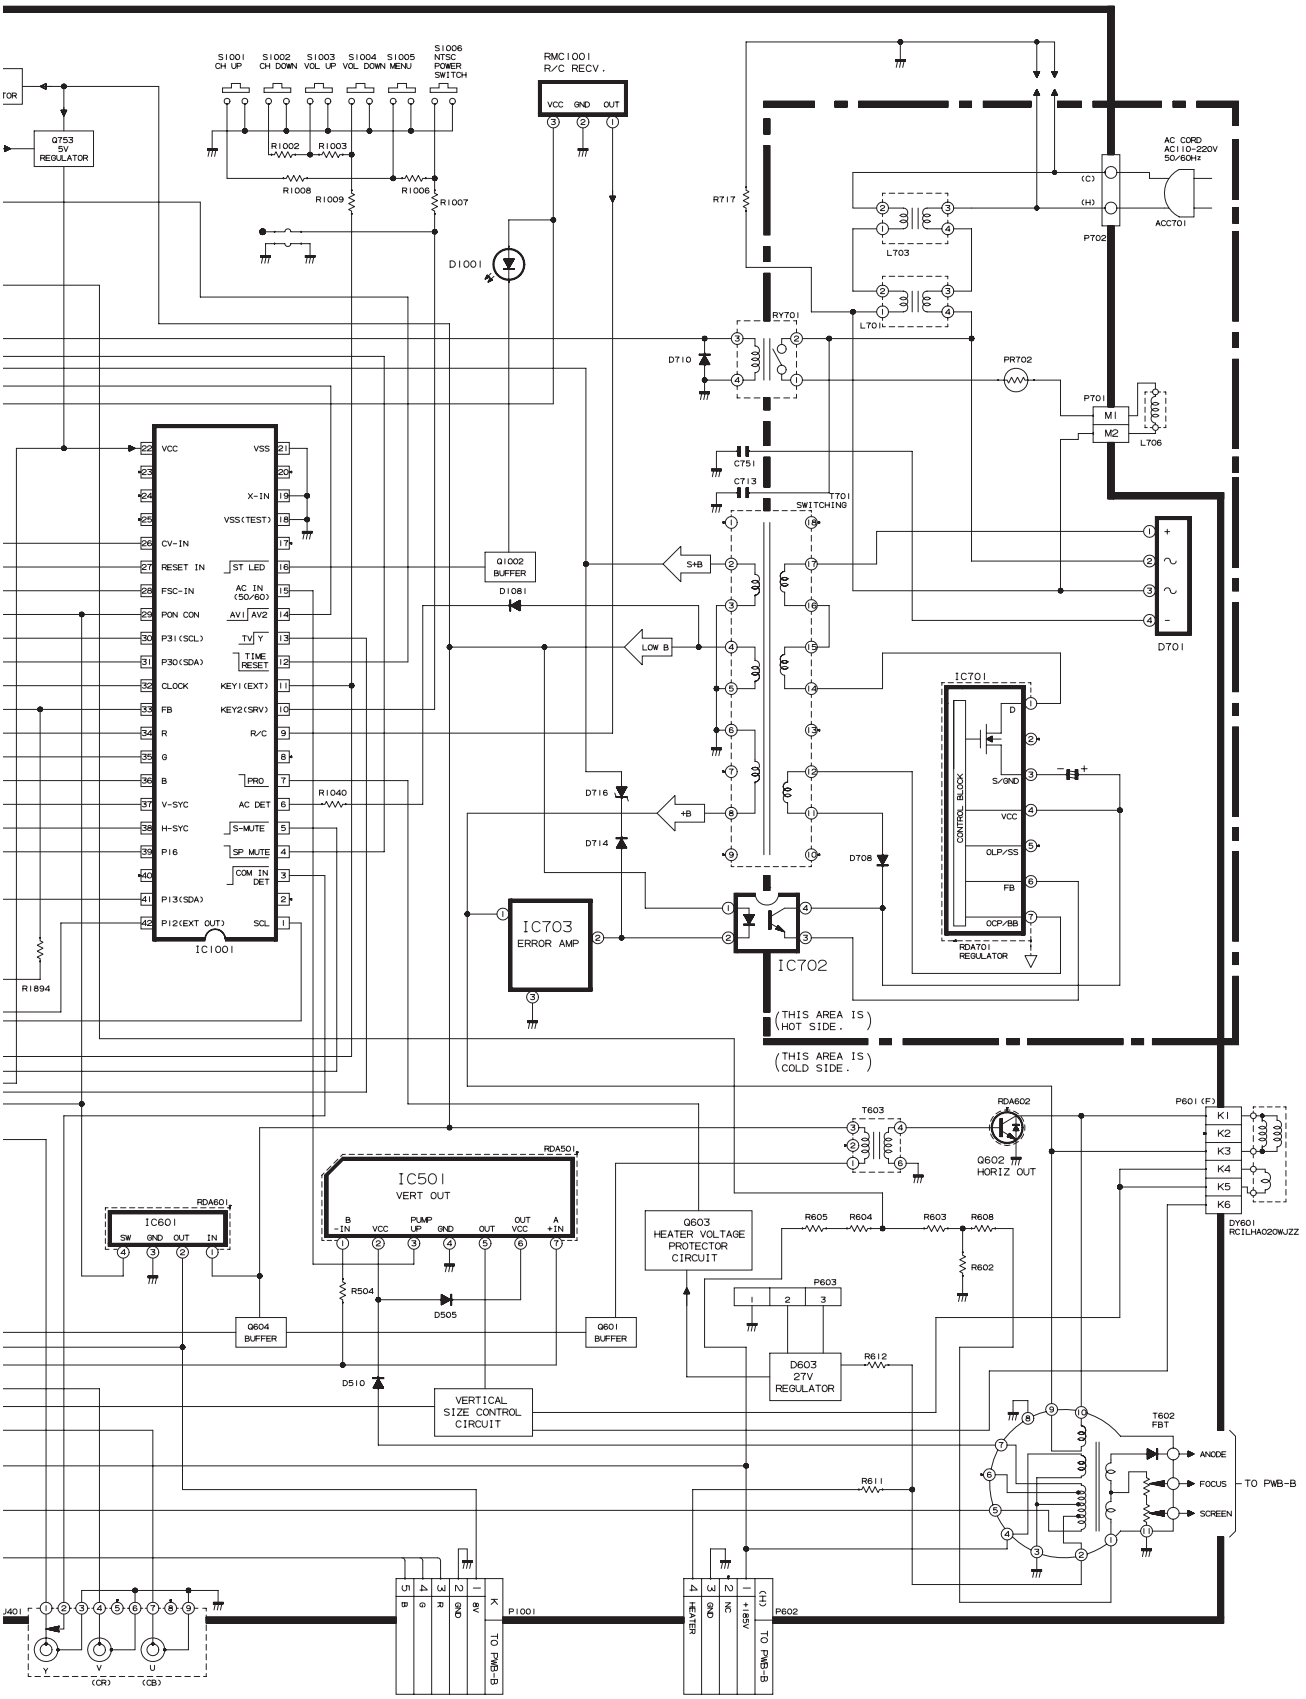

10	11	12	13	14	15	16	17	18	19

MTS BLOCK DIAGRAM

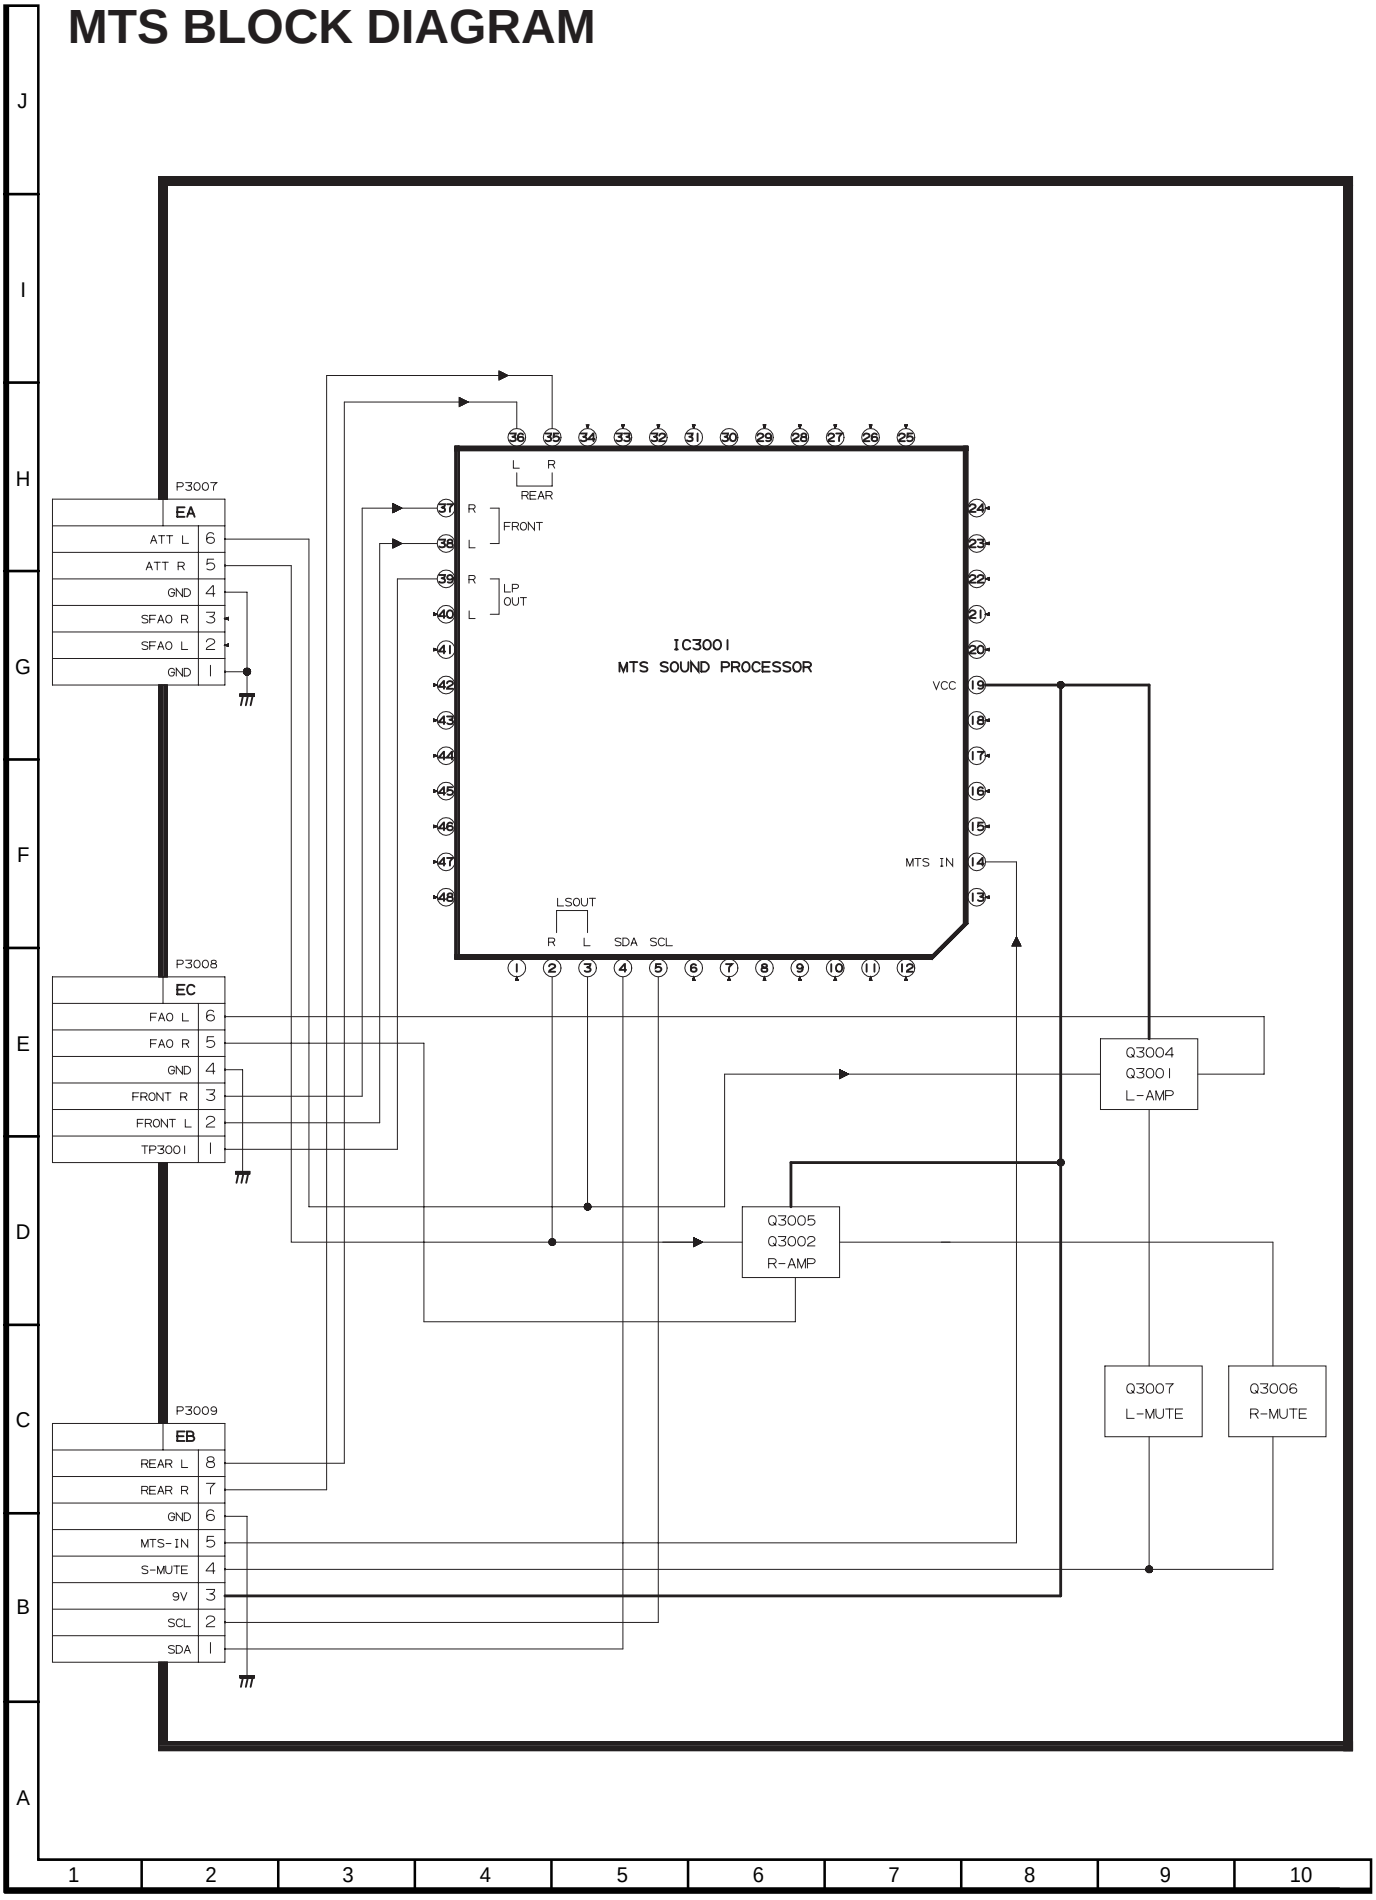

WAVEFORMS

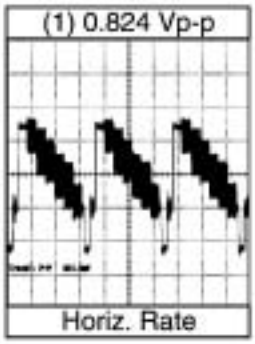
(1) 0.824 Vp-p
Horiz. Rate

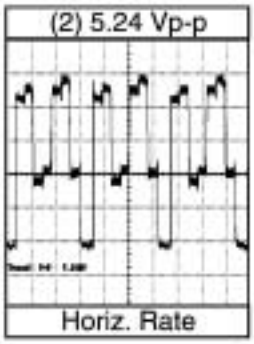
(2) 5.24 Vp-p
Horiz. Rate

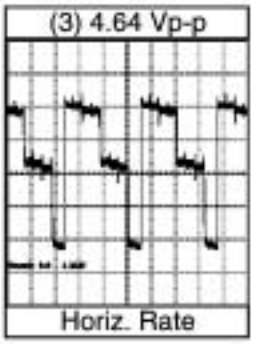
(3) 4.64 Vp-p
Horiz. Rate

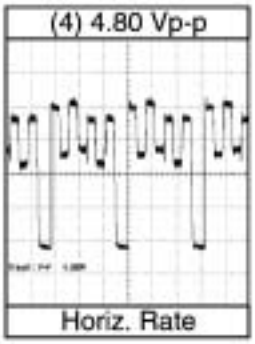
(4) 4.80 Vp-p
Horiz. Rate

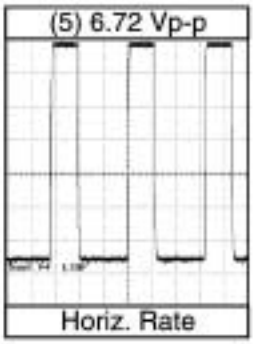
(5) 6.72 Vp-p
Horiz. Rate

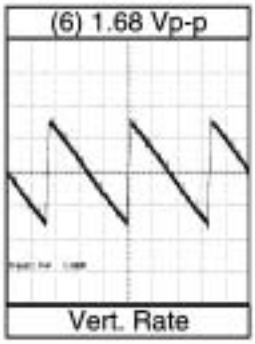
(6) 1.68 Vp-p
Vert. Rate

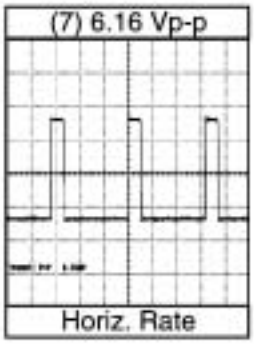
(7) 6.16 Vp-p
Horiz. Rate

(8) 1.68 Vp-p
Vert. Rate

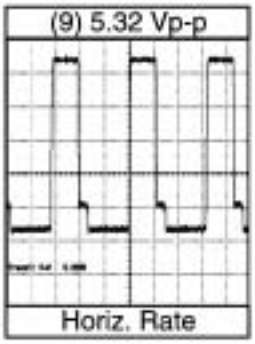
(9) 5.32 Vp-p
Horiz. Rate

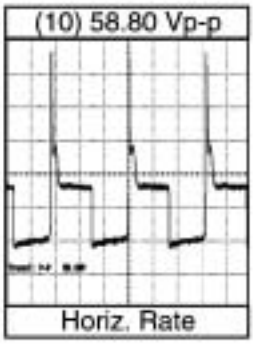
(10) 58.80 Vp-p
Horiz. Rate

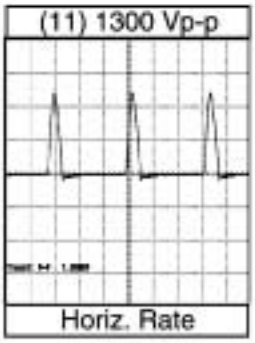
(11) 1300 Vp-p
Horiz. Rate

(12) 46.4 Vp-p
Vert. Rate

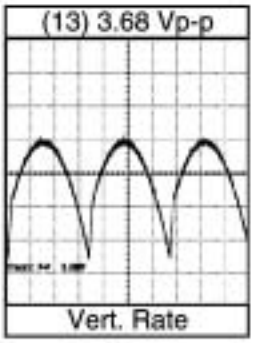
(13) 3.68 Vp-p
Vert. Rate

(14) 140 Vp-p
Horiz. Rate

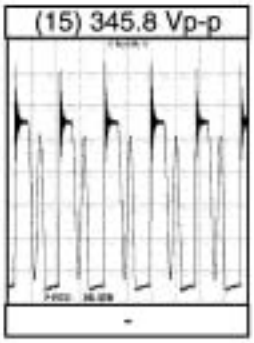
(15) 345.8 Vp-p
-

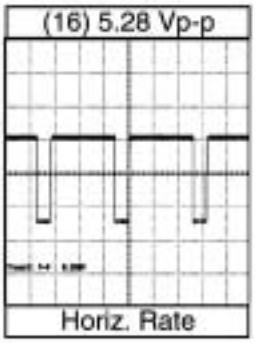
(16) 5.28 Vp-p
Horiz. Rate

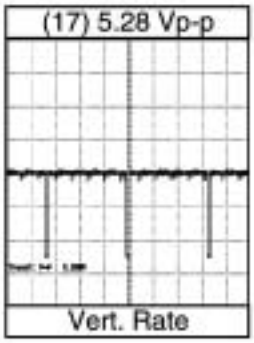
(17) 5.28 Vp-p
Vert. Rate

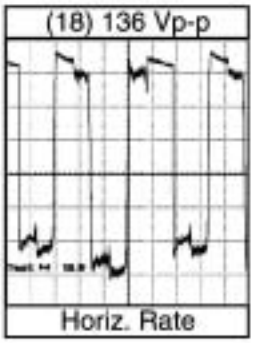
(18) 136 Vp-p
Horiz. Rate

(19) 101.6 Vp-p
Horiz. Rate

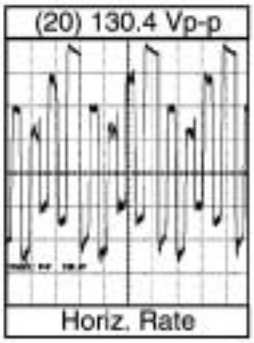
(20) 130.4 Vp-p
Horiz. Rate

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. *The unit of resistance "ohm" is omitted. (K=kΩ=1000Ω, M=MΩ)*
2. *All resistors are 1/16 watt, unless otherwise noted.*
3. *All capacitors are μF, unless otherwise noted. (P=pF=μμF)*
4. *(G) indicates ±2% tolerance may be used.*
5. *⏚ indicates line isolated ground.*

VOLTAGE MEASUREMENT CONDITIONS:

1. *All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.*
2. *All voltages measured with 1000μ V B & W or Color signal.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.*
2. *indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)*

⚠ AND SHADED ( ) COMPONENTS = SAFETY RELATED PARTS.
▲ MARK= X-RAY RELATED PARTS.

DRGANNES MARQUES ⚠ ET HACHRES ( ): PIECES RELATIVES A LA SECURITE.
MARQUE ▲ : PIECS RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

SCHEMATIC DIAGRAM: CRT Unit

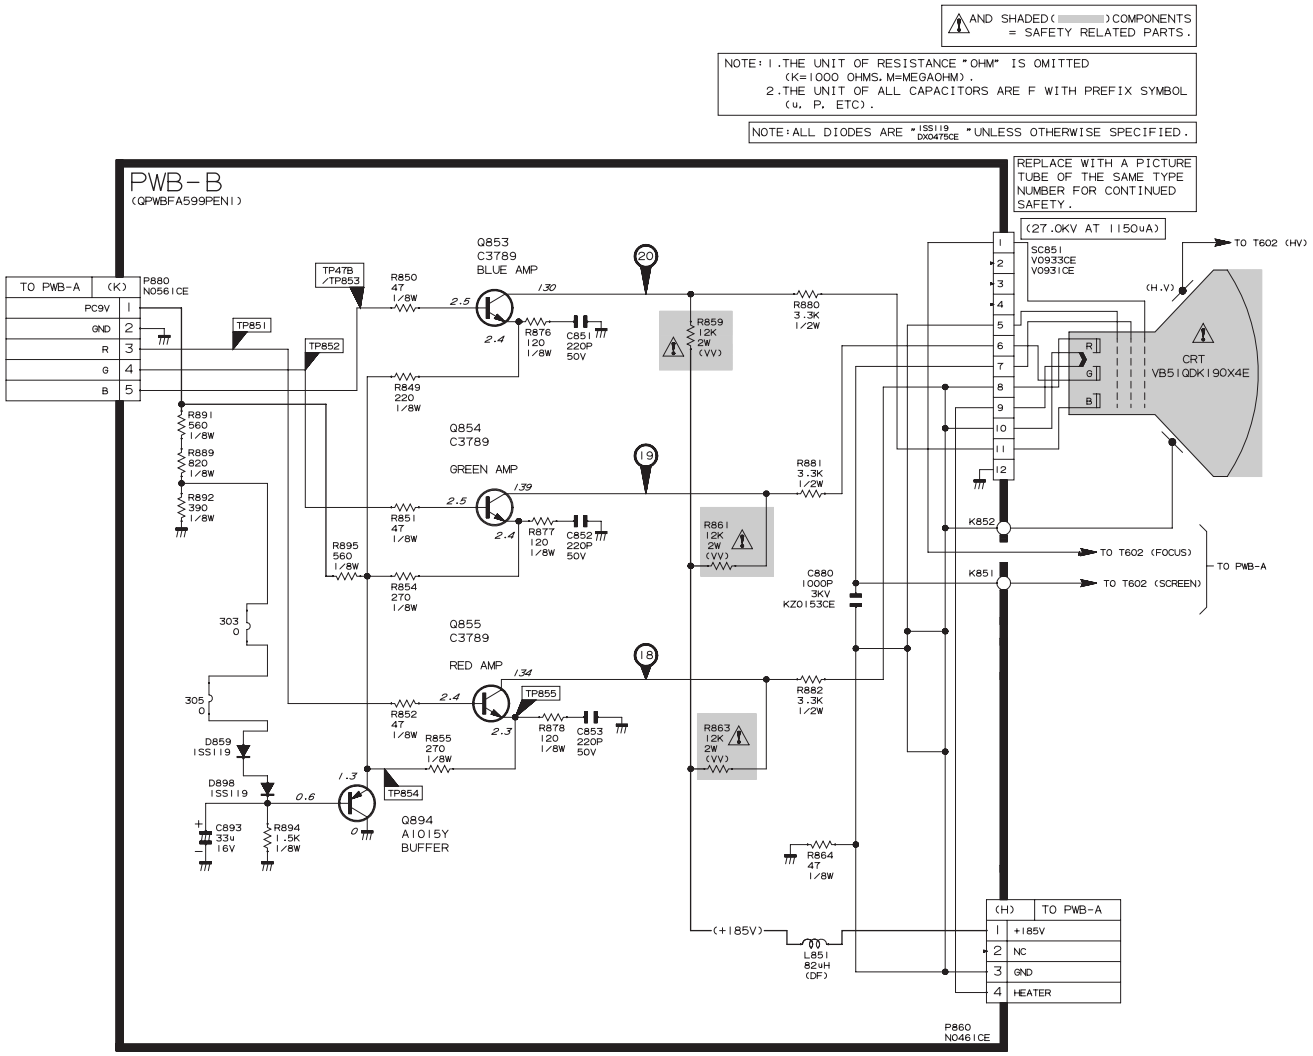

SCHEMATIC DIAGRAM: MAIN Unit

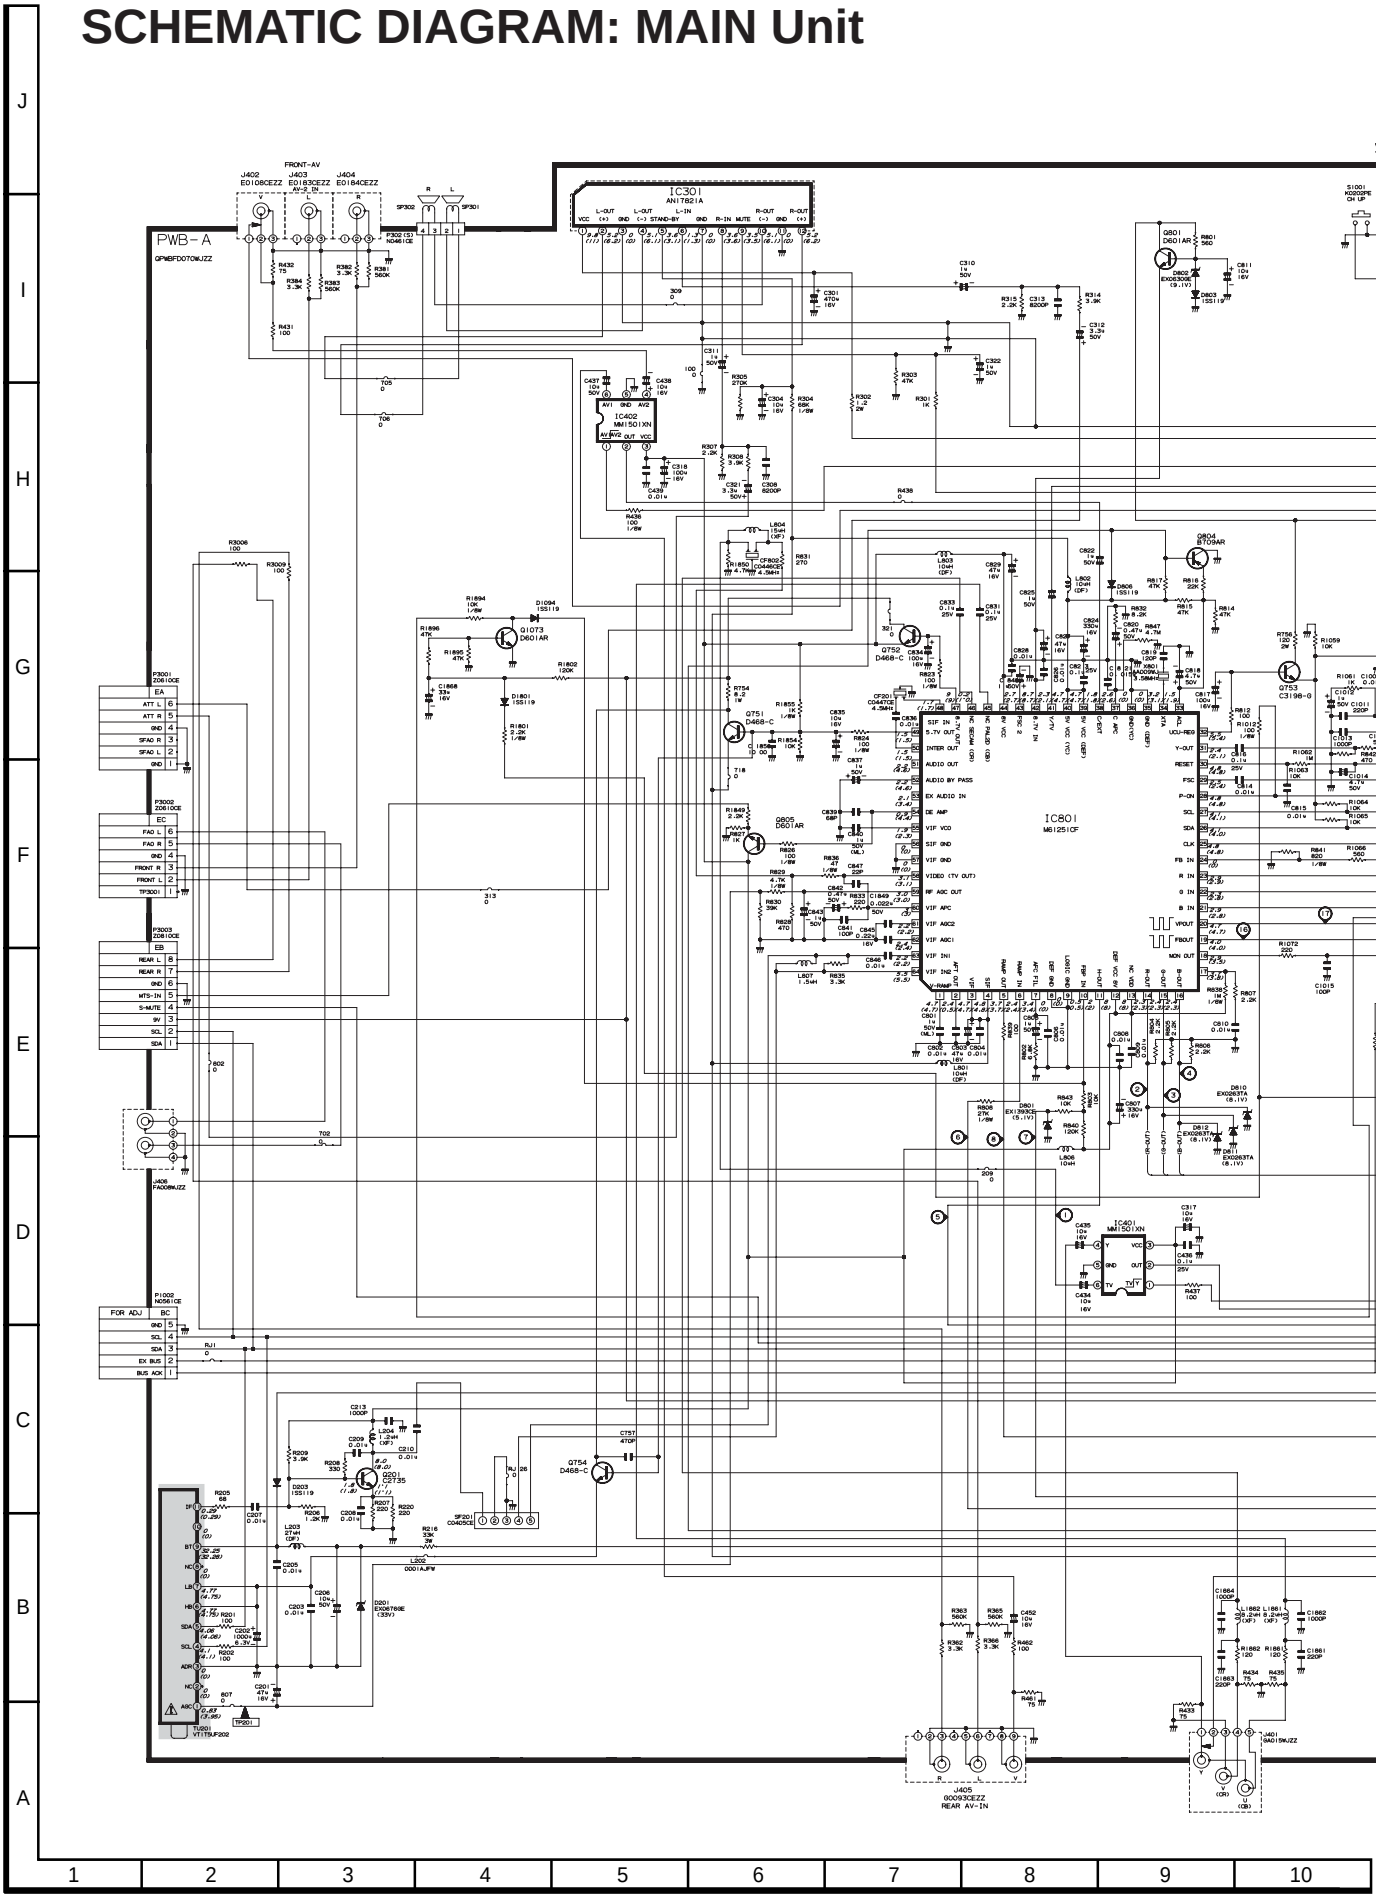

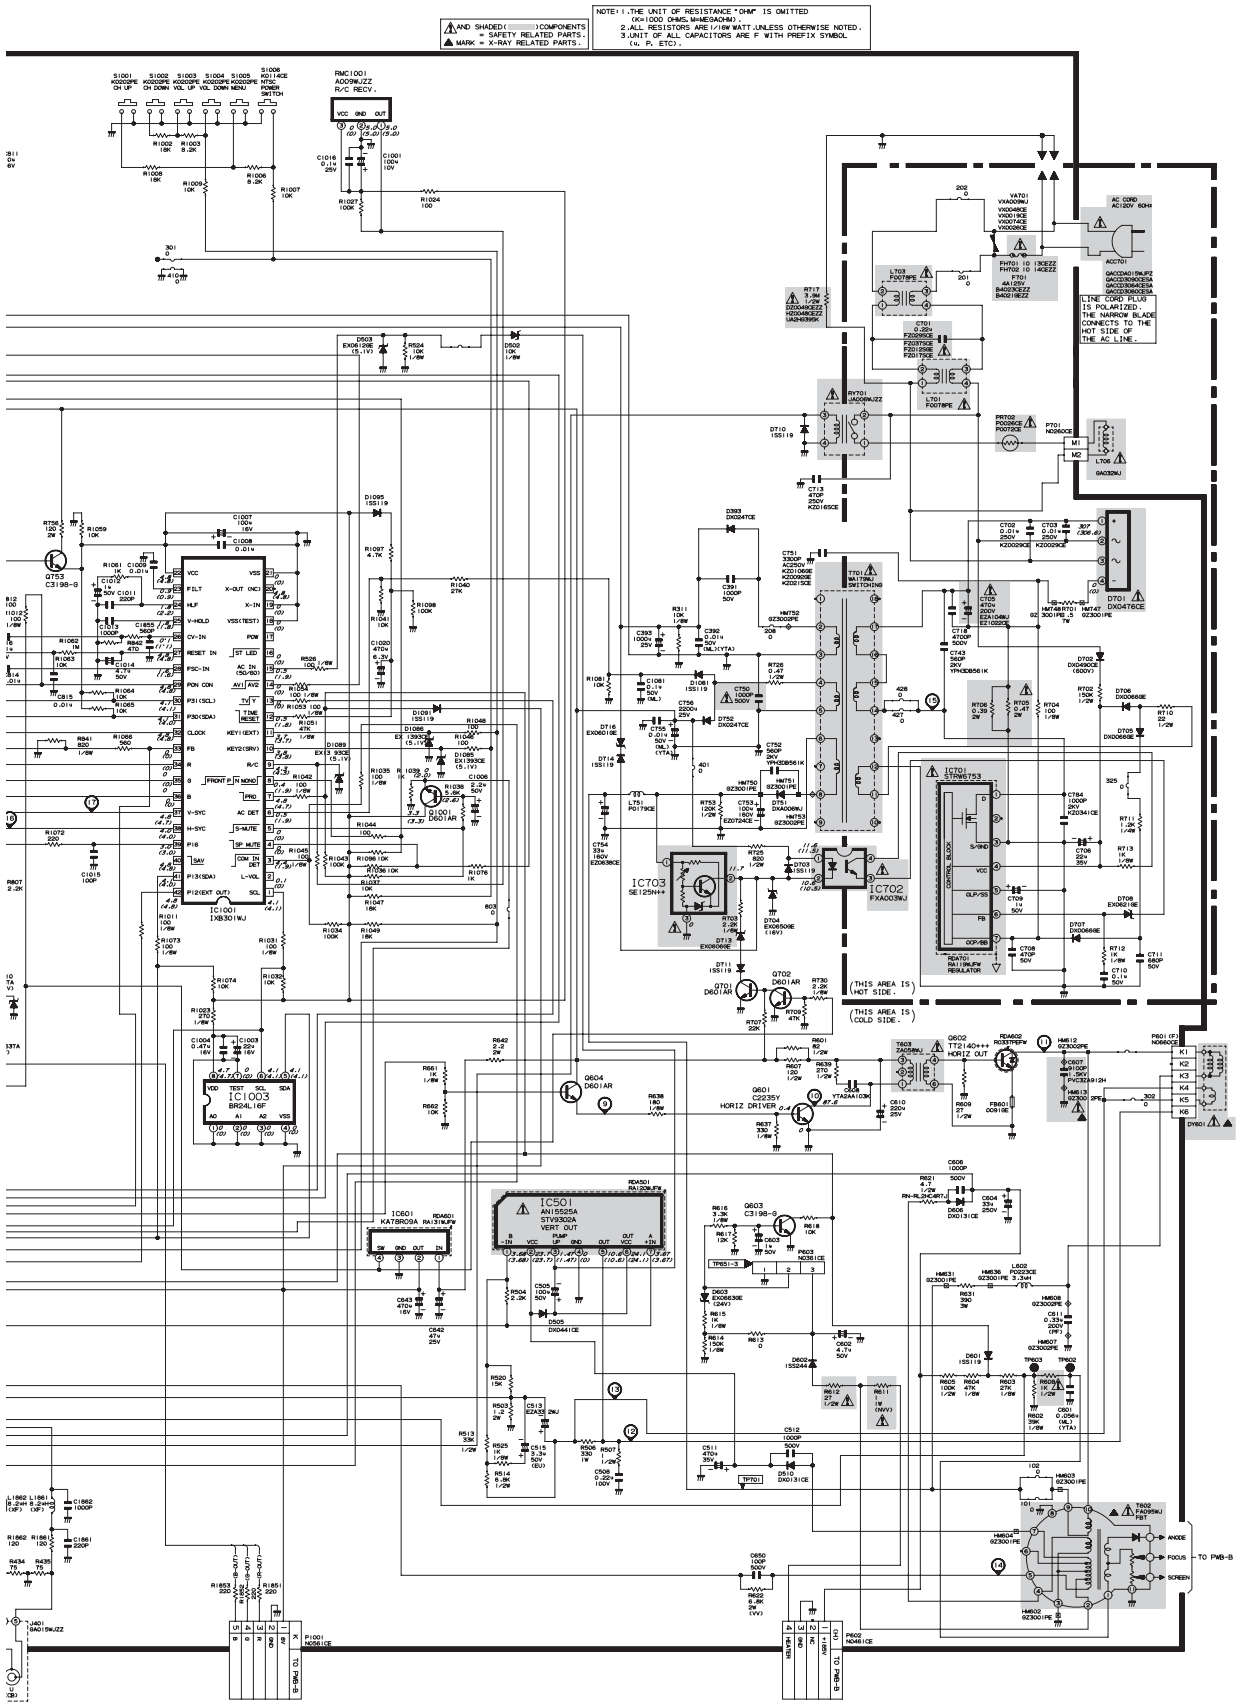
NOTE!!.THE UNIT OF RESISTANCE "OHM" IS OMITTED
(K=1000 OHMS, M=MEGAOHM).
2.ALL RESISTORS ARE 1/6W WATT.UNLESS OTHERWISE NOTED.
3.UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL
(u, P, ETC).
AND SHADED( )COMPONENTS = SAFETY RELATED PARTS.
MARK = X-RAY RELATED PARTS.
LINE CORD PLUG IS POLARIZED. THE NARROW BLADE CONNECTS TO THE HOT SIDE OF THE AC LINE.
(THIS AREA IS HOT SIDE.)
(THIS AREA IS COLD SIDE.)
IC501 AN1552SA STV9302A VERT OUT
IC1001 IXB301WJ
IC1003 BR24L16F
IC703 SE125N++
IC702 FXA0039WJ
IC701 STRW6753
Q601 C2235Y HORIZ DRIVER
Q602 TT2140+++ HORIZ OUT
Q603 C3198-G
Q604 D601AR
Q702 D601AR
TO PWB-B
ANODE
FOCUS
SCREEN

10	11	12	13	14	15	16	17	18	19

SCHEMATIC DIAGRAM: MTS Unit

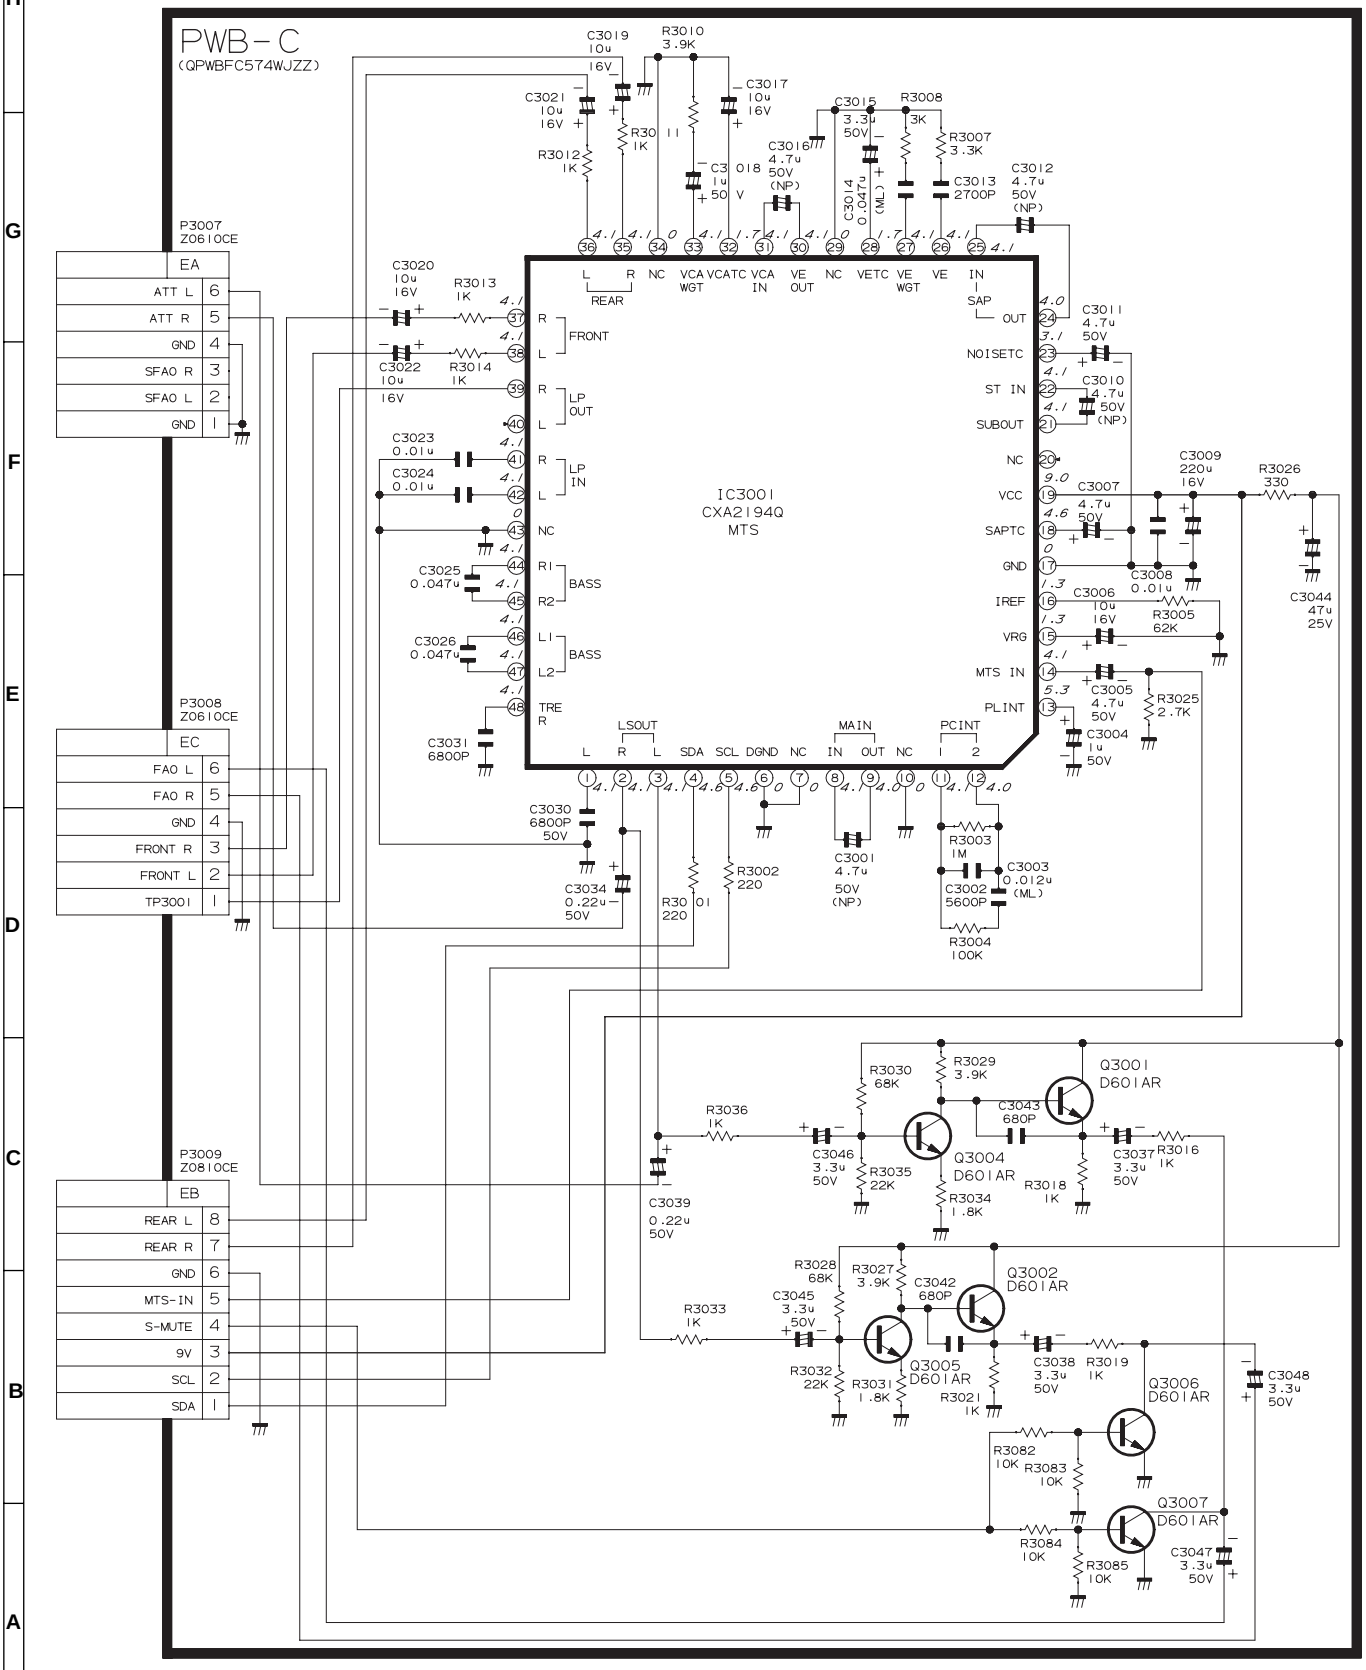

PRINTED WIRING BOARD ASSEMBLIES

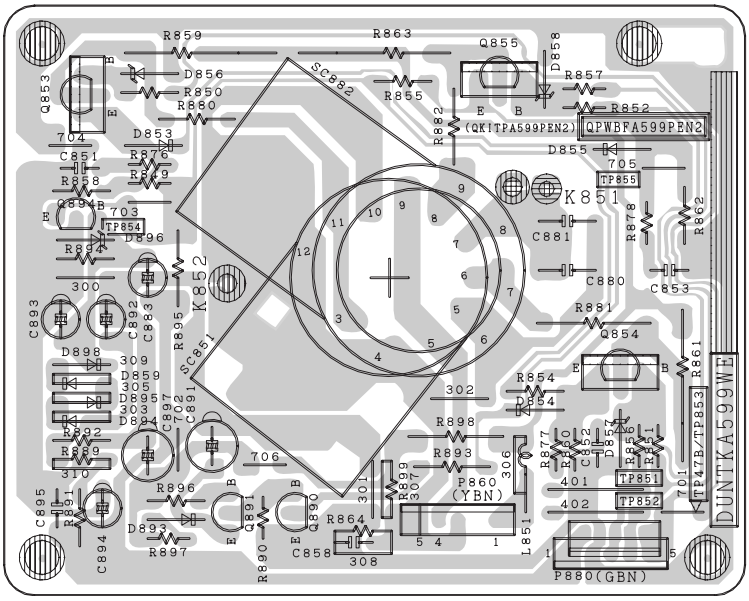

PWB-B: CRT Unit (Wiring Side)

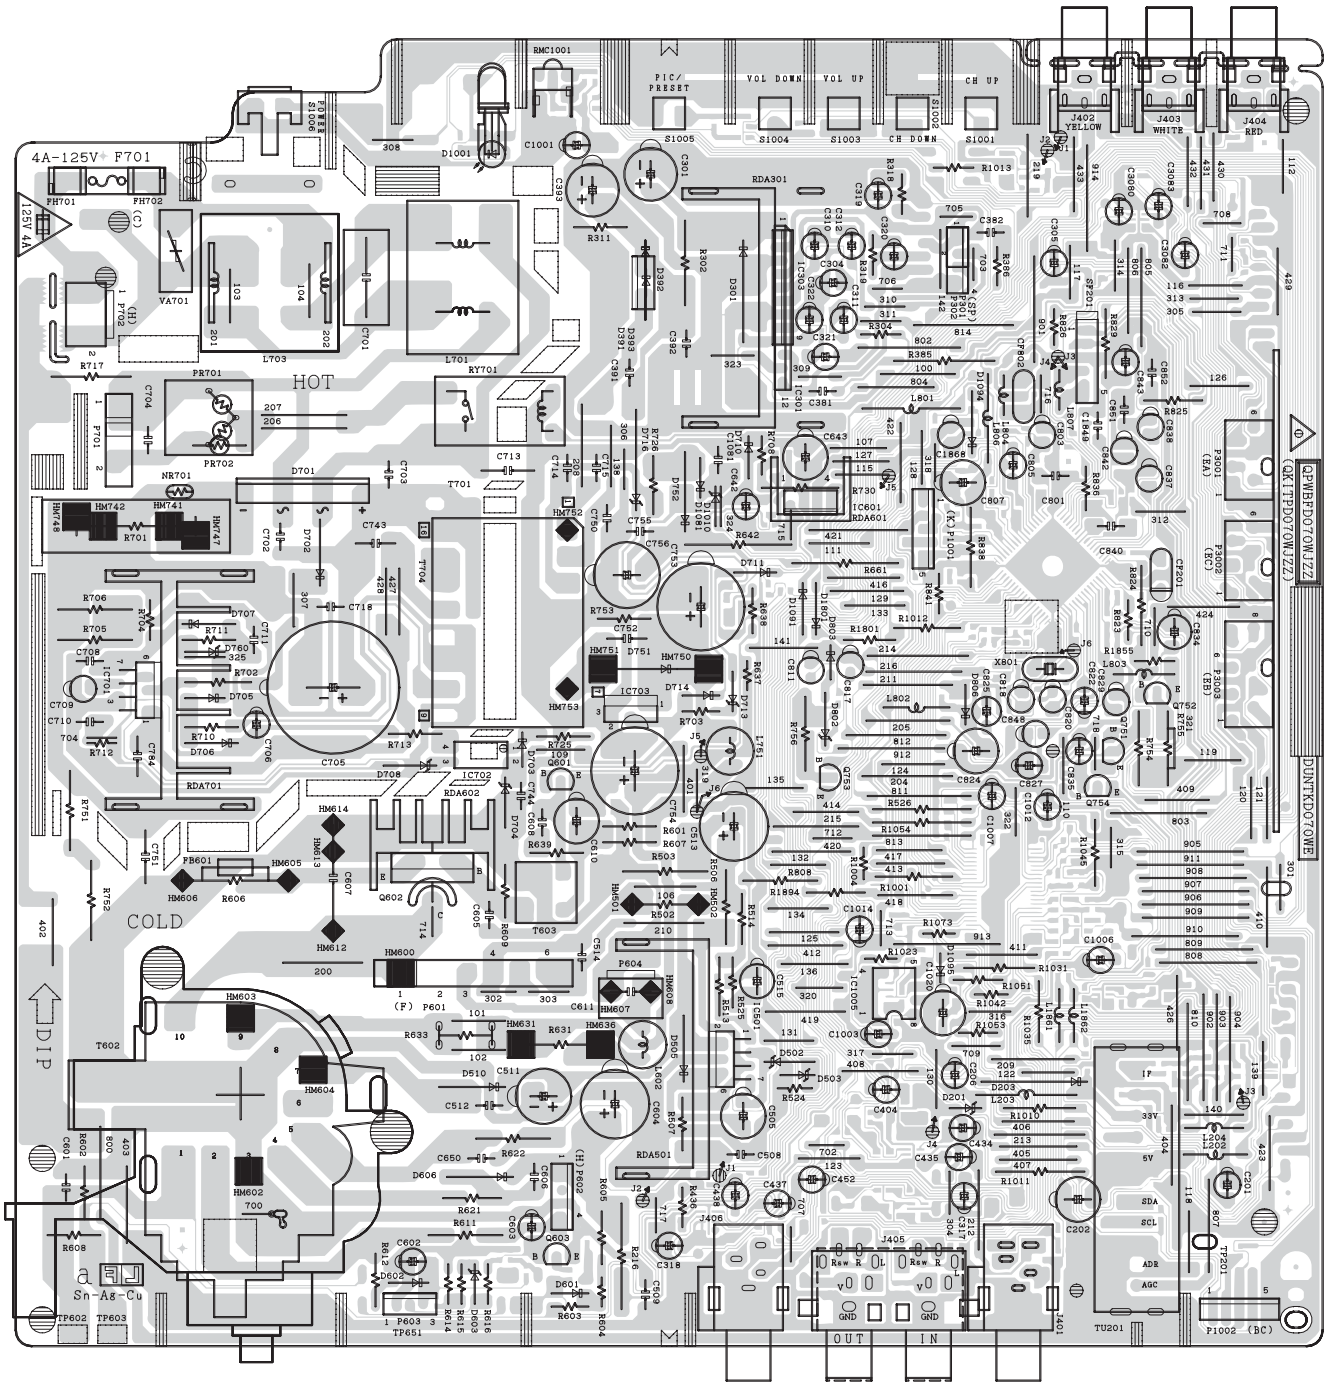

PWB-A: MAIN Unit (Wiring Side)

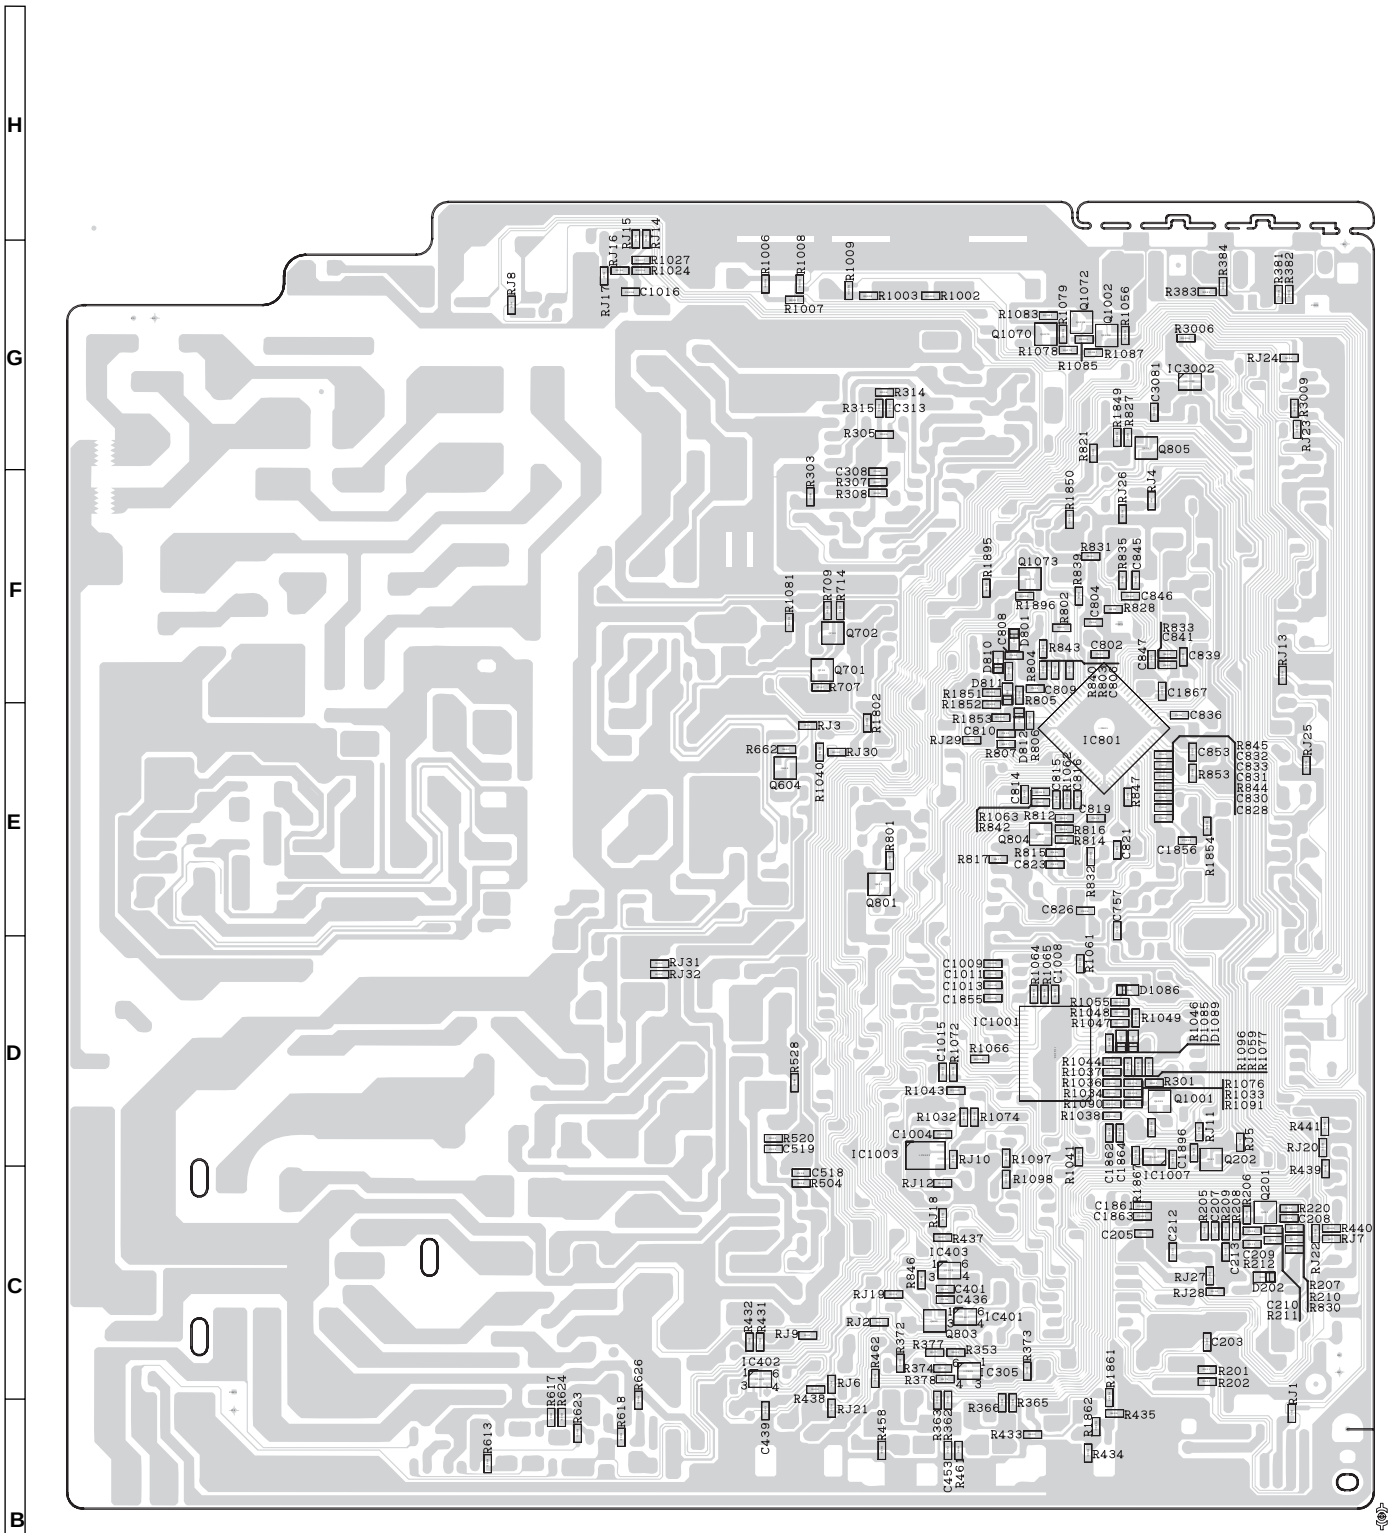

PWB-A: MAIN Unit (Chip Parts Side)

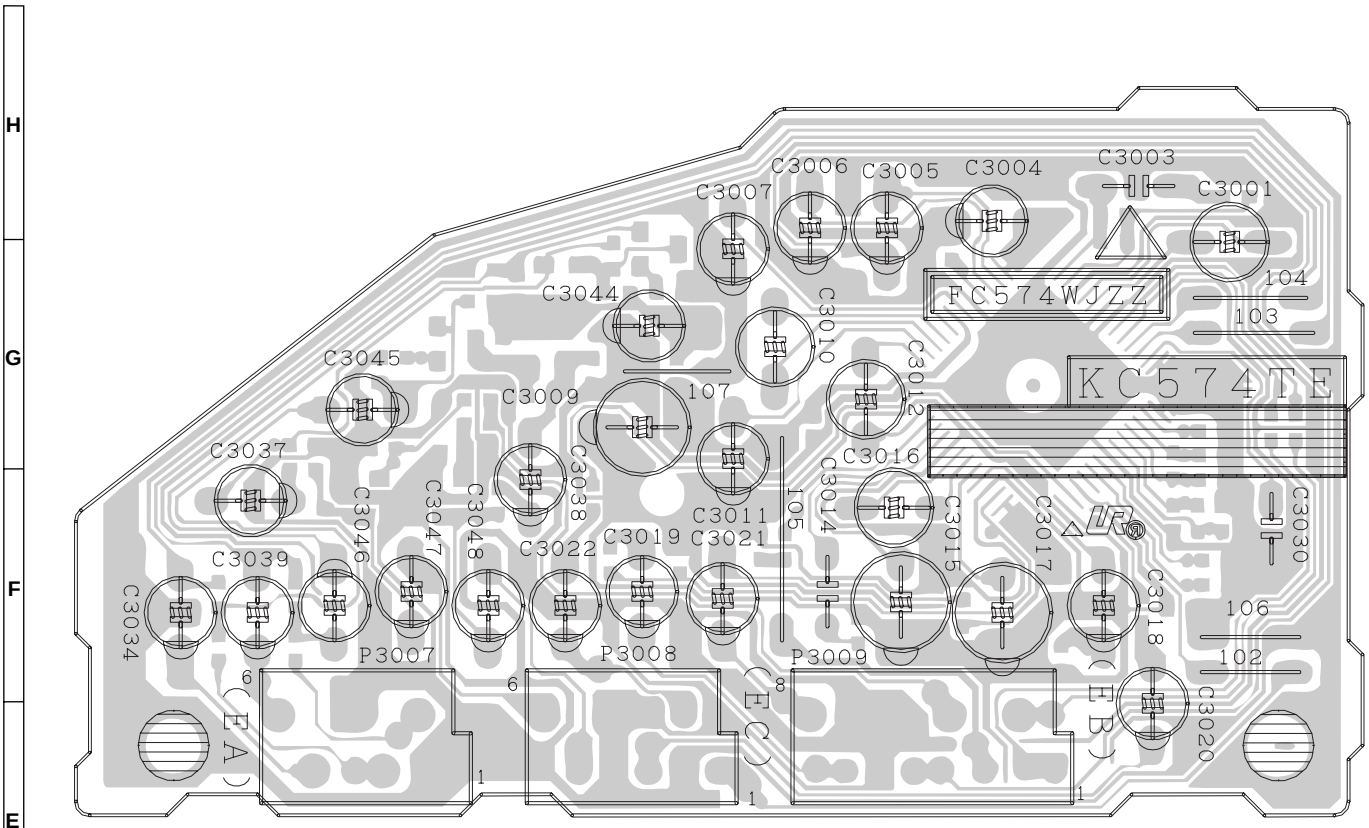

PWB-C: MTS Unit (Wiring Side)

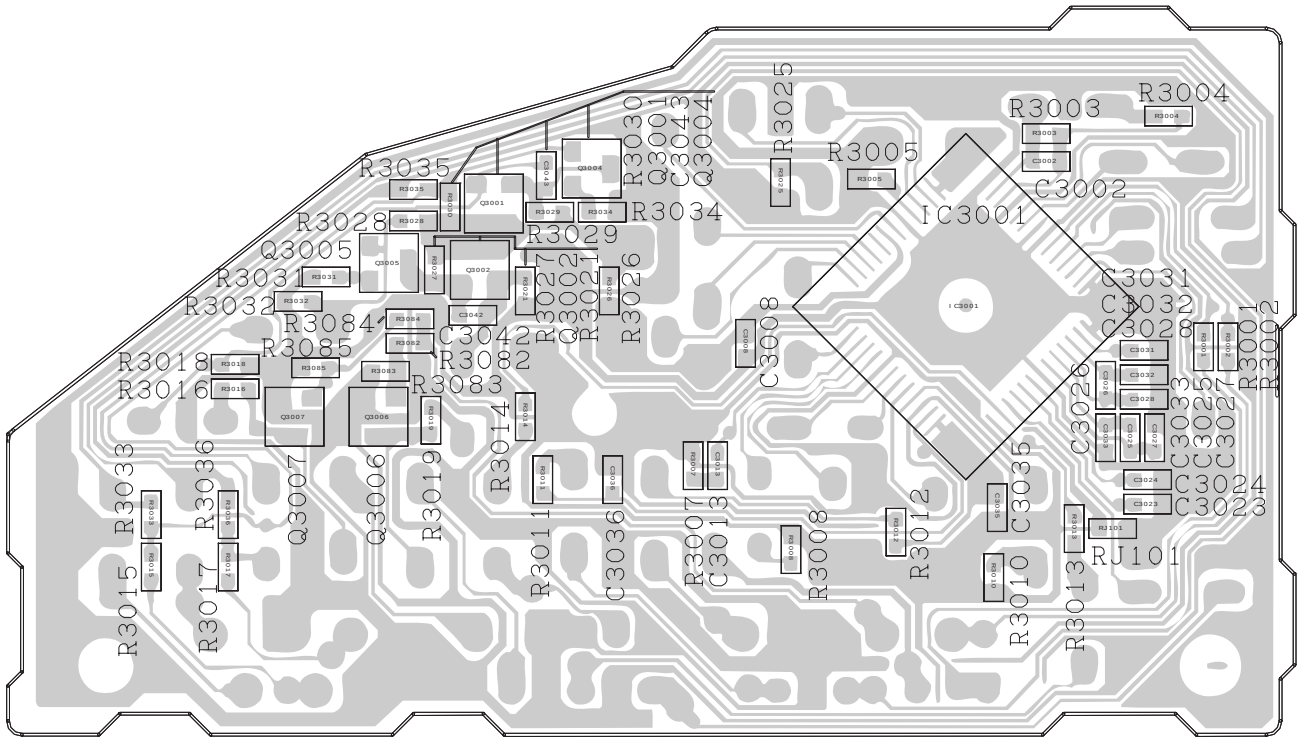

PWB-C: MTS Unit (Chip Parts Side)

REPLACEMENT PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual ; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

in **USA**: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X-RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
PICTURE TUBE				
⚠	VB51QDK190X4E	X	Picture Tube	
⚠ L706	RCiLGA032WJZZ	X	Degaussing Coil	AR
	QEARCA012WJZZ	X	Grounding Strap	AC
PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)				
PWB-A	DUNTKD070WEA0	–	MAIN Unit	—
PWB-B	DUNTKA599WEG3	–	CRT Unit	—
PWB-C	DUNTKC574WEA2	–	MTS Unit	—
DUNTKD070WEA0 PWB-A MAIN UNIT				
TUNER				
NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY NOT INDEPENDENTLY.				
⚠ TU201	VTUVT1T5UF202	X	VHF Tuner	AP
INTEGRATED CIRCUITS				
IC301	VHiAN17821A-1	X	AN17821A	AH
IC401	VHiMM1501XN-1Y	X	MM1501XNRE	AC
IC402	VHiMM1501XN-1Y	X	MM1501XNRE	AC
⚠ IC501	VHiAN15525A-1	X	AN15525A	
IC601	VHiKA78R09AP1	X	I.C.	AC
⚠ IC701	VHiSTRW6753-1	X	I.C.	AG
⚠ IC702	RH-FXA003WJZZ	X	PC123Y82	AB
⚠ IC703	VHiSE125N++-F	X	SE125N	AD
IC801	VHiM61251CF1EQ	X	I.C.	AN
IC1001	RH-iXB301WJZZY	X	I.C.	
IC1003	VHiBR24L16F-1Y	X	BR24L16F-WE2	AF
TRANSISTORS				
Q201	VS2SC2735//1EY	X	2SC2735	AB
Q601	VS2SC2235Y/1E+	X	2SC2235Y	
Q602	VSTT2140+++-F	X	TT2140+++	AD
Q603	VS2SC3198-G-1+	X	2SC3198-G	AB
Q604	VS2SD601AR/-1Y	X	2SD601AR	AB

LISTE DES PIECES

CHANGE DES PIECES

Les pi`eces de rechange qui pr élelesentent ces caract éleristiques sp éleciales de s élecurit éle, sont identifi élees dans ce manuel : les pi`eces élelectriques qui pr élesentent ces particularit éles, sont rep éler élee par la marque ⚠ et sont hachur élees dans les listes de pi`eces et dans les diagrammes sch élematiques.
La substitution d'une pi`ece de rechange par une autre qui ne pr éLesente pas les m éoemes caract éLeristiques de s élecurit éle que la pi`ece recommand élee parl'usine et dans ce manuel de service, peut provoquer une éLelectrocution, un incendie ou toutautre sinistre.

"COMMENT COMMANDER LES PIECES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

1. NUMERO DU MODELE
2. NO. DE REF
3. NO. DE PIECE
4. DESCRIPTION

in **CANADA**: Contact SHARP Electronics of Canada Limited Phone (416) 890-2100

★ MARQUE: SECTION LIVRAISON DES PIECES DERECHANGE

▲ MARQUE: PIECES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code
Q701	VS2SD601AR/-1Y	X	2SD601AR	AB
Q702	VS2SD601AR/-1Y	X	2SD601AR	AB
Q751	VS2SD468-C/-1+	X	2SD468-C	AB
Q752	VS2SD468-C/-1+	X	2SD468-C	AB
Q753	VS2SC3198-G-1+	X	2SC3198-G	AB
Q754	VS2SD468-C/-1+	X	2SD468-C	AB
Q801	VS2SD601AR/-1Y	X	2SD601AR	AB
Q804	VS2SB709AR/-1Y	X	2SB709AR	AB
Q805	VS2SD601AR/-1Y	X	2SD601AR	AB
Q1001	VS2SD601AR/-1Y	X	2SD601AR	AB
Q1073	VS2SD601AR/-1Y	X	2SD601AR	AB
DIODES				
D201	RH-EX0676GEZZY	X	Zener Diode, 33V	AB
D203	VHD1SS119//-1Y	X	1SS119	AA
D393	RH-DX0247CEZZY	X	DX0247CE	
D502	VRD-RA2BE103JY	X	10k 1/8W Carbon	AA
D503	RH-EX0612GEZZY	X	Zener Diode, 5.1V	AB
D505	RH-DX0441CEZZY	X	DX0441CE	AB
D510	RH-DX0131CEZZY	X	DX0131CE	AB
D601	VHD1SS119//-1Y	X	1SS119	AA
D602	VHD1SS244//-1Y	X	1SS244	AB
D603	RH-EX0663GEZZY	X	Zener Diode, 24V	
D606	RH-DX0131CEZZY	X	DX0131CE	AB
⚠ D701	RH-DX0476CEZZ	X	DX0476CE	AC
D702	RH-DX0490CEZZY	X	DX0490CE	AB
D703	VHD1SS119//-1Y	X	1SS119	AA
D704	RH-EX0650GEZZY	X	Zener Diode, 18V	AB
D705	RH-DX0066GEZZY	X	DX0066GE	AB
D706	RH-DX0066GEZZY	X	DX0066GE	AB
D707	RH-DX0066GEZZY	X	DX0066GE	AB
D708	RH-EX0621GEZZY	X	Zener Diode	AB
D710	VHD1SS119//-1Y	X	1SS119	AA
D711	VHD1SS119//-1Y	X	1SS119	AA
D713	RH-EX0606GEZZY	X	Zener Diode	AB
D714	VHD1SS119//-1Y	X	1SS119	AA
D716	RH-EX0601GEZZY	X	Zener Diode	AB
D751	RH-DXA006WJZZ	X	DXA006WJ	AB
D752	RH-DX0247CEZZ	X	DX0247CE	
D801	RH-EX1393CEZZY	X	Zener Diode, 5.1V	AB
D802	RH-EX0630GEZZY	X	Zener Diode, 9.1V	AB
D803	VHD1SS119//-1Y	X	1SS119	AA
D806	VHD1SS119//-1Y	X	1SS119	AA
D810	RH-EX0263TAZZY	X	Zener Diode, 8.1V	AB
D811	RH-EX0263TAZZY	X	Zener Diode, 8.1V	AB

Ref. No.	Part No.	★	Description			Code
D812	RH-EX0263TAZZY	X	Zener Diode, 8.1V			AB
D1081	VHD1SS119//-1Y	X	1SS119			AA
D1085	RH-EX1393CEZZY	X	Zener Diode, 5.1V			AB
D1086	RH-EX1393CEZZY	X	Zener Diode, 5.1V			AB
D1089	RH-EX1393CEZZY	X	Zener Diode, 5.1V			AB
D1091	VHD1SS119//-1Y	X	1SS119			AA
D1094	VHD1SS119//-1Y	X	1SS119			AA
D1095	VHD1SS119//-1Y	X	1SS119			AA
D1801	VHD1SS119//-1Y	X	1SS119			AA
VA701	RH-VXA009WJZZ	X	Varistor			
			PACKAGED CIRCUITS			
⚠ PR702	RMPTP0026CEZZ	X	Packaged Circuit			AF
X801	RCRSAA009WJZZ	X	Crystal, 3.58MHz			AC
			FILTERS			
CF201	RFiLC0447CEZZ	X	Filter			AB
CF802	RFiLC0446CEZZ	X	Filter, 4.5MHz			AB
SF201	RFiLC0405CEZZ	X	Filter			AD
			COILS			
L203	VP-DF270K0000Y	X	Peaking 27µH			AB
L204	VP-XF1R2K0000Y	X	Peaking 1.2µH			AB
L602	RCiLP0223CEZZ	X	Coil 3.3µH			AB
⚠ L701	RCiLF0078PEZZ	X	Coil			AF
⚠ L703	RCiLF0078PEZZ	X	Coil			AF
L751	RCiLP0179CEZZ+	X	Coil			AB
L801	VP-DF100K0000Y	X	Peaking 10µH			AB
L802	VP-DF100K0000Y	X	Peaking 10µH			AB
L803	VP-DF100K0000Y	X	Peaking 10µH			AB
L804	VP-XF150K0000Y	X	Peaking 15µH			AB
L806	VP-DF100K0000Y	X	Peaking 10µH			AB
L807	VP-XF1R5K0000Y	X	Peaking 1.5µH			
L1861	VP-XF8R2K0000Y	X	Peaking 8.2µH			AB
L1862	VP-XF8R2K0000Y	X	Peaking 8.2µH			AB
			TRANSFORMERS			
▲⚠ T602	RTRNFA095WJZZ	X	H-Volt Transformer			AR
⚠ T603	RTRNZA058WJZZ	X	Transformer			AB
⚠ T701	RTRNWA179WJZZ	X	Transformer			
			CAPACITORS			
C201	VCEA0A1CW476M+X		47	16V	Electrolytic	AB
C202	VCEA0A0JW108M+	X	1000	6.3V	Electrolytic	AB
C203	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C205	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C206	VCEA0A1HW106M+X		10	50V	Electrolytic	AB
C207	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C208	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C209	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C210	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C213	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C301	VCEA0A1CW477M+X		470	16V	Electrolytic	AB
C304	VCEA0A1CW106M+X		10	16V	Electrolytic	AA
C308	VCKYCY1HB822KY	X	8200p	50V	Ceramic	AA
C310	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C311	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C312	VCEA0A1HW335M+X		3.3	50V	Electrolytic	AA
C313	VCKYCY1HB822KY	X	8200p	50V	Ceramic	AA
C317	VCE9GA1CW106M+X		10	16V	Elect.(N.P)	AB
C318	VCEA0A1CW107M+X		100	16V	Electrolytic	AB
C321	VCEA0A1HW335M+X		3.3	50V	Electrolytic	AA
C322	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C391	VCKYPA1HB102K+	X	1000p	50V	Ceramic	AA
C392	VCQYTA1HM103J+	X	0.01	50V	Mylar	AB
C393	VCEA0A1EW108M+X		1000	25V	Electrolytic	AB
C434	VCE9GA1CW106M+X		10	16V	Elect.(N.P)	AB
C435	VCE9GA1CW106M+X		10	16V	Elect.(N.P)	AB
C436	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C437	VCE9GA1HW106M+X		10	50V	Elect.(N.P)	AB
C438	VCEA0A1CW106M+X		10	16V	Electrolytic	AA
C439	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C452	VCE9GA1CW106M+X		10	16V	Elect.(N.P)	AB
C505	VCEA0A1HW107M+X		100	50V	Electrolytic	AB
C508	VCFYAA2AA224J+	X	0.22	100V		AC

Ref. No.	Part No.	★	Description			Code
C511	VCEA0A1VW477M+X		470	35V	Electrolytic	AB
C512	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
C513	RC-EZA332WJZZ+	X			Electrolytic	
C515	VCEACA1HC335J+	X	3.3	50V	Electrolytic	AB
C601	VCQYTA1HM563J+	X	0.056	50V	Mylar	AA
C602	VCEA0A1HW475M+X		4.7	50V	Electrolytic	AB
C603	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C604	VCEA0A2EW336M+X		33	250V	Electrolytic	AB
C606	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
▲⚠ C607	VCFPVC3ZA912H	X	9100p	1.8kV	M.Polypro	AE
C608	VCQYTA2AA103K+	X	0.01	100V	Mylar	
C610	VCEA0A1EW227M+X		220	25V	Electrolytic	AB
C611	VCFPVC2DB334J	X	0.33	200V	M.Polypro	AB
C642	VCEA0A1EW476M+X		47	25V	Electrolytic	AB
C643	VCEA0A1CW477M+X		470	16V	Electrolytic	AB
C650	VCKYPA2HB101K+	X	100p	500V	Ceramic	AB
⚠ C701	RC-FZ029SCEZZ	X	0.22	50V		
C702	RC-KZ0029CEZZ+	X	0.01	250V	Cermic	AB
C703	RC-KZ0029CEZZ+	X	0.01	250V	Cermic	AB
⚠ C705	RC-EZA104WJZZ	X	470	200V	Electrolytic	
C706	VCEA0A1VW226M+X		22	35V	Electrolytic	AB
C708	VCKYPA1HB471K+	X	470p	50V	Ceramic	AA
C709	VCEA9M1HW105M+X		1	50V	Electrolytic	AA
C710	VCFYFA1HA104J+	X	0.1	50V	Mylar	AB
C711	VCKYPA1HB681K+	X	680p	50V	Ceramic	AA
C713	RC-KZ016SCEZZ	X	470p	250V	Ceramic	AD
C718	VCKYPA2HB472K+	X	4700p	500V	Ceramic	AB
C743	VCKYPH3DB561K	X	560p	2kV	Ceramic	AB
⚠ C750	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
C751	RC-KZ0106GEZZ	X	3300p	250V	Ceramic	AB
C752	VCKYPH3DB561K	X	560p	2kV	Ceramic	AB
C753	RC-EZ0724CEZZ	X	100	160V	Electrolytic	AC
C754	RC-EZ0638CEZZ	X	33	160V	Electrolytic	AC
C755	VCQYTA1HM103J+	X	0.01	50V	Mylar	AB
C756	VCEA0A1EW228M+X		2200	25V	Electrolytic	
C757	VCKYCY1HB471KY	X	470p	50V	Ceramic	AA
C784	RC-KZ0341CEZZ	X	1000p	2kV	Ceramic	
C801	VCFYFA1HA105J+	X	1	50V	Mylar	AB
C802	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C803	VCEA9M1CW476M+X		47	16V	Electrolytic	AA
C804	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C805	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C806	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C807	VCEA0A1CW337M+X		330	16V	Electrolytic	AB
C808	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C809	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C810	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C811	VCEA9M1CW106M+X		10	16V	Electrolytic	AA
C814	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C815	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C816	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C817	VCEA9M1CW107M+X		100	16V	Electrolytic	AB
C818	VCEA9M1HW475M+X		4.7	50V	Electrolytic	
C819	VCCCCY1HH121JY	X	120p	50V	Ceramic	AA
C820	VCEA9M1HW474M+X		0.47	50V	Electrolytic	AA
C821	VCKYCY1HF153ZY	X	0.015	50V	Ceramic	AA
C822	VCE9GA1HW105M+X		1	50V	Elect.(N.P)	AB
C823	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C824	VCEA0A1CW337M+X		330	16V	Electrolytic	AB
C825	VCE9GA1HW105M+X		1	50V	Elect.(N.P)	AB
C826	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C827	VCEA0A1CW476M+X		47	16V	Electrolytic	AB
C828	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C829	VCEA9M1CW476M+X		47	16V	Electrolytic	AA
C831	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C833	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C834	VCEA0A1CW107M+X		100	16V	Electrolytic	AB
C835	VCEA0A1CW106M+X		10	16V	Electrolytic	AA
C836	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C837	VCEA9M1HW105M+X		1	50V	Electrolytic	AA
C839	VCCCCY1HH680JY	X	68p	50V	Ceramic	AA
C840	VCFYFA1HA105J+	X	1	50V	Mylar	AB
C841	VCCCCY1HH101JY	X	100p	50V	Ceramic	AA
C842	VCEA9M1HW474M+X		0.47	50V	Electrolytic	AA
C843	VCEA0A1HW105M+X		1	50V	Electrolytic	AB
C845	VCKYCY1CF224ZY	X	0.22	16V	Ceramic	AA

Ref. No.	Part No.	★			Description	Code
C846	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C847	VCCCCY1HH220JY	X	22p	50V	Ceramic	AA
C848	VCEA9M1HW105M+	X	1	50V	Electrolytic	AA
C1001	VCEA0A1AW107M+	X	100	10V	Electrolytic	AA
C1003	VCEA0A1CW226M+	X	22	16V	Electrolytic	AB
C1004	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
C1006	VCEA0A1HW225M+	X	2.2	50V	Electrolytic	AB
C1007	VCEA0A1CW107M+	X	100	16V	Electrolytic	AB
C1008	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C1009	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C1011	VCKYCY1HB221KY	X	220p	50V	Ceramic	AA
C1012	VCEA0A1HW105M+	X	1	50V	Electrolytic	AB
C1013	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1014	VCE9GA1HW475M+	X	4.7	50V	Elect.(N.P)	AB
C1015	VCCCCY1HH101JY	X	100p	50V	Ceramic	AA
C1016	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C1020	VCEA0A0JW477M+	X	470	6.3V	Electrolytic	AB
C1081	VCQYTA1HM104J+	X	0.1	50V	Mylar	AB
C1849	VCFYFA1HA223J+	X	0.022	50V	Mylar	AA
C1855	VCKYCY1HB561KY	X	560p	50V	Ceramic	AA
C1856	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1861	VCCCCY1HH221JY	X	220p	50V	Ceramic	AA
C1862	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1863	VCCCCY1HH221JY	X	220p	50V	Ceramic	AA
C1864	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1868	VCEA9M1CW336M+	X	33	16V	Electrolytic	

RESISTORS

RJ1	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ3	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ5	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ9	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ10	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ12	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ13	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ14	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ17	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ18	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ19	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ20	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ22	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ25	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ26	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ29	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ30	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
RJ101	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
R201	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R202	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R205	VRS-CY1JF680JY	X	68	1/16W	Metal Oxide	AA
R206	VRS-CY1JF122JY	X	1.2k	1/16W	Metal Oxide	AA
R207	VRS-CY1JF221JY	X	220	1/16W	Metal Oxide	AA
R208	VRS-CY1JF331JY	X	330	1/16W	Metal Oxide	AA
R209	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R216	VRS-RG3LB333J+	X	33k	3W	Metal Oxide	AB
R220	VRS-CY1JF221JY	X	220	1/16W	Metal Oxide	AA
R301	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R302	VRN-RL3DB1R2J+	X	1.2	2W	Metal Film	AB
R303	VRS-CY1JF473JY	X	47k	1/16W	Metal Oxide	AA
R304	VRD-RA2BE683JY	X	68k	1/8W	Carbon	AA
R305	VRS-CY1JF274JY	X	270k	1/16W	Metal Oxide	AA
R307	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R308	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R311	VRD-RA2BE103JY	X	10k	1/8W	Carbon	AA
R314	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R315	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R362	VRS-CY1JF332JY	X	3.3k	1/16W	Metal Oxide	AA
R363	VRS-CY1JF564JY	X	560k	1/16W	Metal Oxide	AA
R365	VRS-CY1JF564JY	X	560k	1/16W	Metal Oxide	AA
R366	VRS-CY1JF332JY	X	3.3k	1/16W	Metal Oxide	AA
R381	VRS-CY1JF564JY	X	560k	1/16W	Metal Oxide	AA
R382	VRS-CY1JF332JY	X	3.3k	1/16W	Metal Oxide	AA
R383	VRS-CY1JF564JY	X	560k	1/16W	Metal Oxide	AA
R384	VRS-CY1JF332JY	X	3.3k	1/16W	Metal Oxide	AA
R431	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R432	VRS-CY1JF750JY	X	75	1/16W	Metal Oxide	AA
R433	VRS-CY1JF750JY	X	75	1/16W	Metal Oxide	AA
R434	VRS-CY1JF750JY	X	75	1/16W	Metal Oxide	AA
R435	VRS-CY1JF750JY	X	75	1/16W	Metal Oxide	AA
R436	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R437	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R438	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
R461	VRS-CY1JF750JY	X	75	1/16W	Metal Oxide	AA
R462	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R503	VRN-RL3DB1R2J+	X	1.2	2W	Metal Film	AB
R504	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R506	VRS-RG3AB331J+	X	330	1W	Metal Oxide	AB
R507	VRD-RM2HD1R0JY	X	1	1/2W	Carbon	AA
R513	VRD-RM2HD333JY	X	33k	1/2W	Carbon	AA
R514	VRD-RM2HD682JY	X	6.8k	1/2W	Carbon	AA
R520	VRS-CY1JF153JY	X	15k	1/16W	Metal Oxide	AA
R524	VRD-RA2BE103JY	X	10k	1/8W	Carbon	AA
R525	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R526	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R601	VRD-RM2HD820JY	X	82	1/2W	Carbon	
R602	VRD-RA2BE393JY	X	39k	1/8W	Carbon	AA
R603	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R604	VRD-RA2BE473JY	X	47k	1/8W	Carbon	AA
R605	VRD-RM2HD104JY	X	100k	1/2W	Carbon	AA
R607	VRD-RM2HD121JY	X	120	1/2W	Carbon	
⚠ R608	VRD-RM2HD102JY	X	1k	1/2W	Carbon	AA
R609	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
⚠ R611	VRN-RL3AB1R0J+	X	1	1W	Metal Film	AB
⚠ R612	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
R613	VRS-CY1JF000JY	X	0	1/16W	Metal Oxide	AA
R614	VRD-RA2BE154JY	X	150k	1/8W	Carbon	AA
R615	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R616	VRD-RA2BE332JY	X	3.3k	1/8W	Carbon	AA
R617	VRS-CY1JF123JY	X	12k	1/16W	Metal Oxide	AA
R618	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R621	VRN-RL2HC4R7J+	X	4.7	1/2W	Metal Film	AB
R622	VRS-VV3DB682J	X	6.8k	2W	Metal Oxide	AA
R631	VRS-KT3LB391J	X	390	3W	Metal Oxide	AB
R637	VRD-RA2BE331JY	X	330	1/8W	Carbon	AA
R638	VRD-RA2BE181JY	X	180	1/8W	Carbon	AA
R639	VRD-RM2HD271JY	X	270	1/2W	Carbon	
R642	VRN-RL3DB2R2J+	X	2.2	2W	Metal Film	
R661	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R662	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R701	VRW-KQ3NC1R5K	X	1.5	7W	CEMENT	AB
R702	VRD-RM2HD154JY	X	150k	1/2W	Carbon	AA
R703	VRD-RA2BE222JY	X	2.2k	1/8W	Carbon	AA
R704	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
⚠ R705	VRN-RL3DBR47J+	X	0.47	2W	Metal Film	
⚠ R706	VRN-RL3DBR39J+	X	0.39	2W	Metal Film	
R707	VRS-CY1JF223JY	X	22k	1/16W	Metal Oxide	AA
R709	VRS-CY1JF473JY	X	47k	1/16W	Metal Oxide	AA
R710	VRD-RM2HD220JY	X	22	1/2W	Carbon	AA
R711	VRD-RA2EE122JY	X	1.2k	1/4W	Carbon	AA
R712	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R713	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
⚠ R717	RR-DZ0049CEZZY	X	3.9M	1/2W	Carbon	AB
R725	VRD-RM2HD821JY	X	820	1/2W	Carbon	AA
R726	VRN-RL2HCR47J+	X	0.47	1/2W	Metal Film	AB
R730	VRD-RA2BE222JY	X	2.2k	1/8W	Carbon	AA
R753	VRD-RM2HD124JY	X	120k	1/2W	Carbon	AA
R754	VRN-RL3AB8R2J+	X	8.2	1W	Metal Film	AB
R756	VRS-RG3DB121J+	X	120	2W	Metal Oxide	AB
R801	VRS-CY1JF561JY	X	560	1/16W	Metal Oxide	AA
R802	VRS-CY1JF682JY	X	6.8k	1/16W	Metal Oxide	AA
R803	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R804	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R805	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R806	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R807	VRS-CY1JF222JY	X	2.2k	1/16W	Metal Oxide	AA
R808	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R812	VRS-CY1JF101JY	X	100	1/16W	Metal Oxide	AA
R814	VRS-CY1JF473JY	X	47k	1/16W	Metal Oxide	AA
R815	VRS-CY1JF473JY	X	47k	1/16W	Metal Oxide	AA
R816	VRS-CY1JF223JY	X	22k	1/16W	Metal Oxide	AA
R817	VRS-CY1JF473JY	X	47k	1/16W	Metal Oxide	AA
R823	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R824	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA

Ref. No.	Part No.	★	Description	Code
R826	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R827	VRS-CY1JF102JY	X	1k 1/16W Metal Oxide	AA
R828	VRS-CY1JF471JY	X	470 1/16W Metal Oxide	AA
R829	VRD-RA2BE472JY	X	4.7k 1/8W Carbon	AA
R830	VRS-CY1JF393JY	X	39k 1/16W Metal Oxide	AA
R831	VRS-CY1JF271JY	X	270 1/16W Metal Oxide	
R832	VRS-CY1JF822JY	X	8.2k 1/16W Metal Oxide	AA
R833	VRS-CY1JF221JY	X	220 1/16W Metal Oxide	AA
R835	VRS-CY1JF332JY	X	3.3k 1/16W Metal Oxide	AA
R836	VRD-RA2BE470JY	X	47 1/8W Carbon	AA
R838	VRD-RA2BE105JY	X	1M 1/8W Carbon	AA
R839	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R840	VRS-CY1JF124JY	X	120k 1/16W Metal Oxide	AA
R841	VRD-RA2BE821JY	X	820 1/8W Carbon	AA
R842	VRS-CY1JF471JY	X	470 1/16W Metal Oxide	AA
R843	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R847	VRS-CY1JF475JY	X	4.7M 1/16W Metal Oxide	AA
R1002	VRS-CY1JF183JY	X	18k 1/16W Metal Oxide	AA
R1003	VRS-CY1JF822JY	X	8.2k 1/16W Metal Oxide	AA
R1006	VRS-CY1JF822JY	X	8.2k 1/16W Metal Oxide	AA
R1007	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1008	VRS-CY1JF183JY	X	18k 1/16W Metal Oxide	AA
R1009	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1011	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1012	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1023	VRD-RA2BE271JY	X	270 1/8W Carbon	AA
R1024	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R1027	VRS-CY1JF104JY	X	100k 1/16W Metal Oxide	AA
R1031	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1032	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1034	VRS-CY1JF104JY	X	100k 1/16W Metal Oxide	AA
R1035	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1036	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1037	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1038	VRS-CY1JF562JY	X	5.6k 1/16W Metal Oxide	AA
R1039	VRS-CY1JF102JY	X	1k 1/16W Metal Oxide	AA
R1040	VRS-CY1JF273JY	X	27k 1/16W Metal Oxide	AA
R1041	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1042	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1043	VRS-CY1JF104JY	X	100k 1/16W Metal Oxide	AA
R1044	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R1045	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1046	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R1047	VRS-CY1JF183JY	X	18k 1/16W Metal Oxide	AA
R1048	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R1049	VRS-CY1JF183JY	X	18k 1/16W Metal Oxide	AA
R1051	VRD-RA2BE473JY	X	47k 1/8W Carbon	AA
R1053	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1054	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1059	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1061	VRS-CY1JF102JY	X	1k 1/16W Metal Oxide	AA
R1062	VRS-CY1JF105JY	X	1M 1/16W Metal Oxide	AA
R1063	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1064	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1065	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1066	VRS-CY1JF561JY	X	560 1/16W Metal Oxide	AA
R1072	VRS-CY1JF221JY	X	220 1/16W Metal Oxide	AA
R1073	VRD-RA2BE101JY	X	100 1/8W Carbon	AA
R1074	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1076	VRS-CY1JF102JY	X	1k 1/16W Metal Oxide	AA
R1081	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1096	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1097	VRS-CY1JF472JY	X	4.7k 1/16W Metal Oxide	AA
R1098	VRS-CY1JF104JY	X	100k 1/16W Metal Oxide	AA
R1801	VRD-RA2BE222JY	X	2.2k 1/8W Carbon	AA
R1802	VRS-CY1JF124JY	X	120k 1/16W Metal Oxide	AA
R1849	VRS-CY1JF222JY	X	2.2k 1/16W Metal Oxide	AA
R1850	VRS-CY1JF472JY	X	4.7k 1/16W Metal Oxide	AA
R1851	VRS-CY1JF221JY	X	220 1/16W Metal Oxide	AA
R1852	VRS-CY1JF221JY	X	220 1/16W Metal Oxide	AA
R1853	VRS-CY1JF221JY	X	220 1/16W Metal Oxide	AA
R1854	VRS-CY1JF103JY	X	10k 1/16W Metal Oxide	AA
R1855	VRD-RA2BE102JY	X	1k 1/8W Carbon	AA
R1861	VRS-CY1JF121JY	X	120 1/16W Metal Oxide	AA
R1862	VRS-CY1JF121JY	X	120 1/16W Metal Oxide	AA
R1894	VRD-RA2BE103JY	X	10k 1/8W Carbon	AA
R1895	VRS-CY1JF473JY	X	47k 1/16W Metal Oxide	AA
R1896	VRS-CY1JF473JY	X	47k 1/16W Metal Oxide	AA
R3006	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA
R3009	VRS-CY1JF101JY	X	100 1/16W Metal Oxide	AA

BALUN

FB601	RBLN-0091GEZZY	X	Ferrite Bead, BLN-0091GE	

SWITCHES

S1001	QSW-K0202PEZZ+	X	Switch, CH UP	AB
S1002	QSW-K0202PEZZ+	X	Switch, CH DOWN	AB
S1003	QSW-K0202PEZZ+	X	Switch, VOL UP	AB
S1004	QSW-K0202PEZZ+	X	Switch, VOL DOWN	AB
S1005	QSW-K0202PEZZ+	X	Switch, MENU	AB
S1006	QSW-K0114CEZZ	X	Switch, Power	AC

MISCELLANEOUS PARTS

⚠ F701	QFS-B4023CEZZ	X	Fuse, 4A/125V	AC
⚠ FH701	QFSHD1013CEZZ+	X	Fuse Holder	AB
⚠ FH702	QFSHD1014CEZZ+	X	Fuse Holder	AB
J401	QJAKGA015WJZZ	X	Jack (Y, V, U)	AD
J402	QJAKE0108CEZZ	X	Jack, FRONT AV (V)	AB
J403	QJAKE0183CEZZ	X	Jack, FRONT AV (L)	AB
J404	QJAKE0184CEZZ	X	Jack, FRONT AV (R)	AB
J405	QJAKG0093CEZZ	X	Jack, Rear AV	AE
J406	QJAKFA008WJZZ	X	Jack	AC
P302	QPLGN0461CEZZA	X	Plug, 4Pin(S)	AB
P601	QPLGN0660CEZZ	X	Plug, 6Pin(F)	AB
P602	QPLGN0461CEZZA	X	Plug, 4Pin(H)	AB
P603	QPLGN0361CEZZA	X	Plug, 3Pin(TP651-3)	AB
P701	QPLGN0260CEZZ	X	Plug, 2Pin (M)	AB
P1001	QPLGN0561CEZZA	X	Plug, 5Pin(K)	AB
P1002	QPLGN0561CEZZ	X	Plug, 5Pin(BC)	AA
RDA501	PRDARA120WJFW	X	Heat Sink for IC501	AB
RDA601	PRDARA131WJFW	X	Heat Sink for IC601	
RDA602	PRDAR0337PEFW	X	Heat Sink for Q602	AB
⚠ RDA701	PRDARA119WJFW	X	Heat Sink for IC701	AC
RMC1001	RRMCUA009WJZZ	X	Remote Receiver	AC
⚠ RY701	RRLYJA006WJZZ	X	Relay	AC

DUNTKA599WEG3
PWB-B CRT UNIT

TRANSISTORS

Q853	VS2SC3789//2E	X	2SC3789	AB
Q854	VS2SC3789//2E	X	2SC3789	AB
Q855	VS2SC3789//2E	X	2SC3789	AB
Q894	VS2SA1015Y/1E+	X	2SA1015Y	AB

DIODES

D859	VHD1SS119//-1Y	X	1SS119	AA
D898	VHD1SS119//-1Y	X	1SS119	AA

COIL

L851	VP-MK820K0000+	X	Peaking 82µH	AB

CAPACITORS

C851	VCKYPA1HB221K+	X	220p	50V	Ceramic	AA
C852	VCKYPA1HB221K+	X	220p	50V	Ceramic	AA
C853	VCKYPA1HB221K+	X	220p	50V	Ceramic	AA
C880	RC-KZ0153CEZZ	X	1000p	3kV	Ceramic	AB
C893	VCEA0A1CW336M+	X	33	16V	Electrolytic	AA

RESISTORS

R849	VRD-RA2BE221JY	X	220	1/8W	Carbon	AA
R850	VRD-RA2BE470JY	X	47	1/8W	Carbon	AA
R851	VRD-RA2BE470JY	X	47	1/8W	Carbon	AA
R852	VRD-RA2BE470JY	X	47	1/8W	Carbon	AA
R854	VRD-RA2BE271JY	X	270	1/8W	Carbon	AA
R855	VRD-RA2BE271JY	X	270	1/8W	Carbon	AA
⚠ R859	VRS-VV3DB123J	X	12k	2W	Metal Oxide	AA
⚠ R861	VRS-VV3DB123J	X	12k	2W	Metal Oxide	AA
⚠ R863	VRS-VV3DB123J	X	12k	2W	Metal Oxide	AA

Ref. No.	Part No.	★	Description			Code
R864	VRD-RA2BE470JY	X	47	1/8W	Carbon	AA
R876	VRD-RA2BE121JY	X	120	1/8W	Carbon	AA
R877	VRD-RA2BE121JY	X	120	1/8W	Carbon	AA
R878	VRD-RA2BE121JY	X	120	1/8W	Carbon	AA
R880	VRD-RM2HD332JY	X	3.3k	1/2W	Carbon	AA
R881	VRD-RM2HD332JY	X	3.3k	1/2W	Carbon	AA
R882	VRD-RM2HD332JY	X	3.3k	1/2W	Carbon	AA
R889	VRD-RA2BE821JY	X	820	1/8W	Carbon	AA
R891	VRD-RA2BE561JY	X	560	1/8W	Carbon	AA
R892	VRD-RA2BE391JY	X	390	1/8W	Carbon	AA
R894	VRD-RA2BE152JY	X	1.5k	1/8W	Carbon	AA
R895	VRD-RA2BE561JY	X	560	1/8W	Carbon	AA

MISCELLANEOUS PARTS

P860	QPLGN0461CEZZ	X	Plug, 4Pin	AA
P880	QPLGN0561CEZZ	X	Plug, 5Pin	AA
SC851	QSOCV0933CEZZ	X	Socket, 12Pin	AC

DUNTKC574WEA2
PWB-C MTS UNIT

INTEGRATED CIRCUIT

IC3001	VHiCXA2194Q-1Y	X	CXA2194Q/-T6	AP

TRANSISTORS

Q3001	VS2SD601AR/-1Y	X	2SD601AR	AB
Q3002	VS2SD601AR/-1Y	X	2SD601AR	AB
Q3004	VS2SD601AR/-1Y	X	2SD601AR	AB
Q3005	VS2SD601AR/-1Y	X	2SD601AR	AB
Q3006	VS2SD601AR/-1Y	X	2SD601AR	AB
Q3007	VS2SD601AR/-1Y	X	2SD601AR	AB

CAPACITORS

C3001	VCE9GA1HW475M+X	X	4.7	50V	Elect.(N.P)	AB
C3002	VCKYCY1HB562KY	X	5600p	50V	Ceramic	AA
C3003	VCQYTA1HM123J+	X	0.012	50V	Mylar	AA
C3004	VCEA0A1HW105M+X	X	1	50V	Electrolytic	AB
C3005	VCEA0A1HW475M+X	X	4.7	50V	Electrolytic	AB
C3006	VCEA0A1CW106M+X	X	10	16V	Electrolytic	AA
C3007	VCEA0A1HW475M+X	X	4.7	50V	Electrolytic	AB
C3008	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C3009	VCEA0A1CW227M+X	X	220	16V	Electrolytic	AB
C3010	VCE9GA1HW475M+X	X	4.7	50V	Elect.(N.P)	AB
C3011	VCEA0A1HW475M+X	X	4.7	50V	Electrolytic	AB
C3012	VCE9GA1HW475M+X	X	4.7	50V	Elect.(N.P)	AB
C3013	VCKYCY1HB272KY	X	2700p	50V	Ceramic	AA
C3014	VCQYTA1HM473J+	X	0.047	50V	Mylar	AB
C3015	VCEACA1HC335K+	X	3.3	50V	Electrolytic	AB
C3016	VCE9GA1HW475M+X	X	4.7	50V	Elect.(N.P)	AB
C3017	VCEACA1CC106K+	X	10	16V	Electrolytic	AB
C3018	VCEA0A1HW105M+X	X	1	50V	Electrolytic	AB
C3019	VCEA0A1CW106M+X	X	10	16V	Electrolytic	AA
C3020	VCEA0A1CW106M+X	X	10	16V	Electrolytic	AA
C3021	VCEA0A1CW106M+X	X	10	16V	Electrolytic	AA
C3022	VCEA0A1CW106M+X	X	10	16V	Electrolytic	AA
C3023	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C3024	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C3025	VCKYCY1HF473ZY	X	0.047	50V	Ceramic	AB
C3026	VCKYCY1HF473ZY	X	0.047	50V	Ceramic	AB
C3030	VCQYTA1HM682J+	X	6800p	50V	Mylar	AB
C3031	VCKYCY1HF682ZY	X	6800p	50V	Ceramic	AA
C3034	VCEA0A1HW224M+X	X	0.22	50V	Electrolytic	AB
C3037	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA
C3038	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA
C3039	VCEA0A1HW224M+X	X	0.22	50V	Electrolytic	AB
C3042	VCKYCY1HB681KY	X	680p	50V	Ceramic	AA
C3043	VCKYCY1HB681KY	X	680p	50V	Ceramic	AA
C3044	VCEA0A1EW476M+X	X	47	25V	Electrolytic	AB
C3045	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA
C3046	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA
C3047	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA
C3048	VCEA0A1HW335M+X	X	3.3	50V	Electrolytic	AA

Ref. No.	Part No.	★	Description			Code

RESISTORS

R3001	VRS-CY1JF221JY	X	220	1/16W	Metal Oxide	AA
R3002	VRS-CY1JF221JY	X	220	1/16W	Metal Oxide	AA
R3003	VRS-CY1JF105JY	X	1M	1/16W	Metal Oxide	AA
R3004	VRS-CY1JF104JY	X	100k	1/16W	Metal Oxide	AA
R3005	VRS-CY1JF623JY	X	62k	1/16W	Metal Oxide	AA
R3007	VRS-CY1JF332JY	X	3.3k	1/16W	Metal Oxide	AA
R3008	VRS-CY1JF302JY	X	3.0k	1/16W	Metal Oxide	AA
R3010	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R3011	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3012	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3013	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3014	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3016	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3018	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3019	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3021	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3025	VRS-CY1JF272JY	X	2.7k	1/16W	Metal Oxide	AA
R3026	VRS-CY1JF331JY	X	330	1/16W	Metal Oxide	AA
R3027	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R3028	VRS-CY1JF683JY	X	68k	1/16W	Metal Oxide	AA
R3029	VRS-CY1JF392JY	X	3.9k	1/16W	Metal Oxide	AA
R3030	VRS-CY1JF683JY	X	68k	1/16W	Metal Oxide	AA
R3031	VRS-CY1JF182JY	X	1.8k	1/16W	Metal Oxide	AA
R3032	VRS-CY1JF223JY	X	22k	1/16W	Metal Oxide	AA
R3033	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3034	VRS-CY1JF182JY	X	1.8k	1/16W	Metal Oxide	AA
R3035	VRS-CY1JF223JY	X	22k	1/16W	Metal Oxide	AA
R3036	VRS-CY1JF102JY	X	1k	1/16W	Metal Oxide	AA
R3082	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R3083	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R3084	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA
R3085	VRS-CY1JF103JY	X	10k	1/16W	Metal Oxide	AA

MISCELLANEOUS PARTS

P3007	QPLGZ0610CEZZ	X	Plug, 6Pin (EA)	AB
P3008	QPLGZ0610CEZZ	X	Plug, 6Pin (EC)	AB
P3009	QPLGZ0810CEZZ	X	Plug, 8Pin (EB)	AB

Ref. No.	Part No.	★	Description	Code

MISCELLANEOUS PARTS

⚠ ACC701	QACCDA015WJPZ	X	AC Cord	
SP301	VSP1205PB09WA	X	Speaker (L)	AK
SP302	VSP1205PB09WA	X	Speaker (R)	AK
	QCNW-A871WJZZ	X	Connecting Cord	AB
	QCNW-A872WJZZ	X	Connecting Cord	AC
	QCNW-A873WJZZ	X	Connecting Cord	AC

SUPPLIED ACCESSORIES

ACCESSORIES

X1	RRMCGA317WJSA	X	Infrared Remote Control Unit	
X2	TiNS-B731WJZZ	X	Operation Manual	
X3	TGAN-A216WJN1	X	Guarantee Card	

PACKING PARTS
(NOT REPLACEMENT ITEM)

S1	SPAKCB876WJZZ	–	Packing Case	—
S2	SPAKPA055WJZZ	–	Wrapping Paper	—
S3	SPAKXA145WJZZ	–	Packing Add.	—
S4	SSAKA0101GJZZ	–	Polyethylene Bag	—

CABINET PARTS

1	CCABAA323WEH7	X	Front Cabinet Ass'y	
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB3155CESA	X	Badge, "SHARP"	AD
1-3	HDECQA119WJSA	X	LED, R/C Cover	
1-4	JBTN-A070WJKD	X	Button, Power	
1-5	MSPRC0005PEFW	X	Power Button Spring	AA
1-6	GDORFA015WJKD	X	Door	
1-7	MSPRPA012WJFW	X	Door Spring	AB
1-8	HiNDPA194WJSA	X	Indication Plate	AC
1-9	GBFL-A007WJZZ	X	Speaker Baffle	AC
2	GCABBA088WJKA	X	Rear Cabinet	AX

Ref. No.	Part No.	★	Description	Code

CABINET PARTS LOCATION

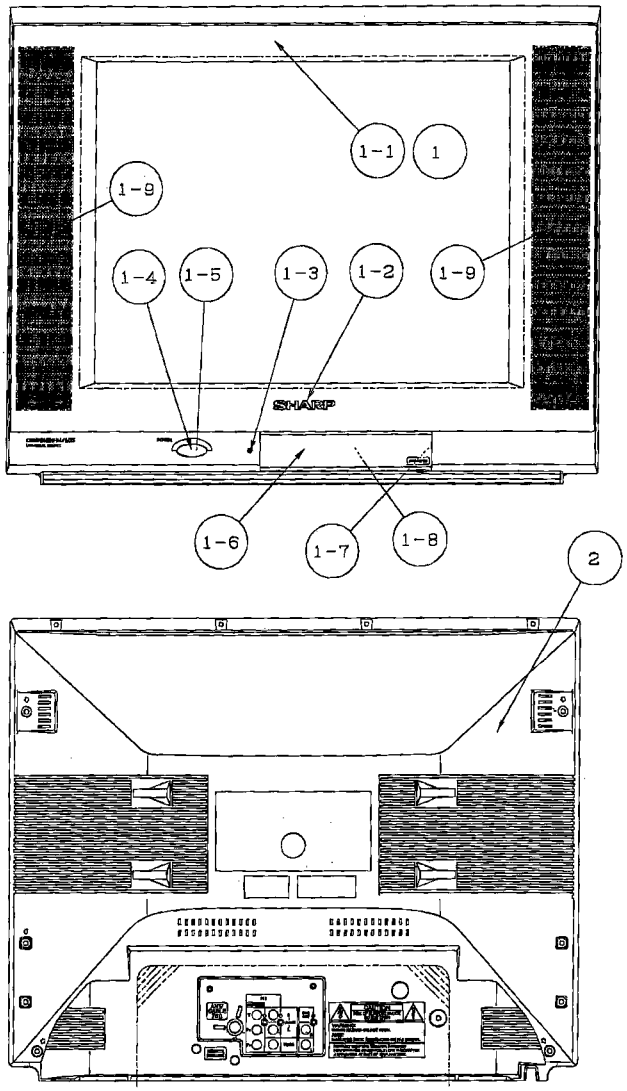

PACKING OF THE SET

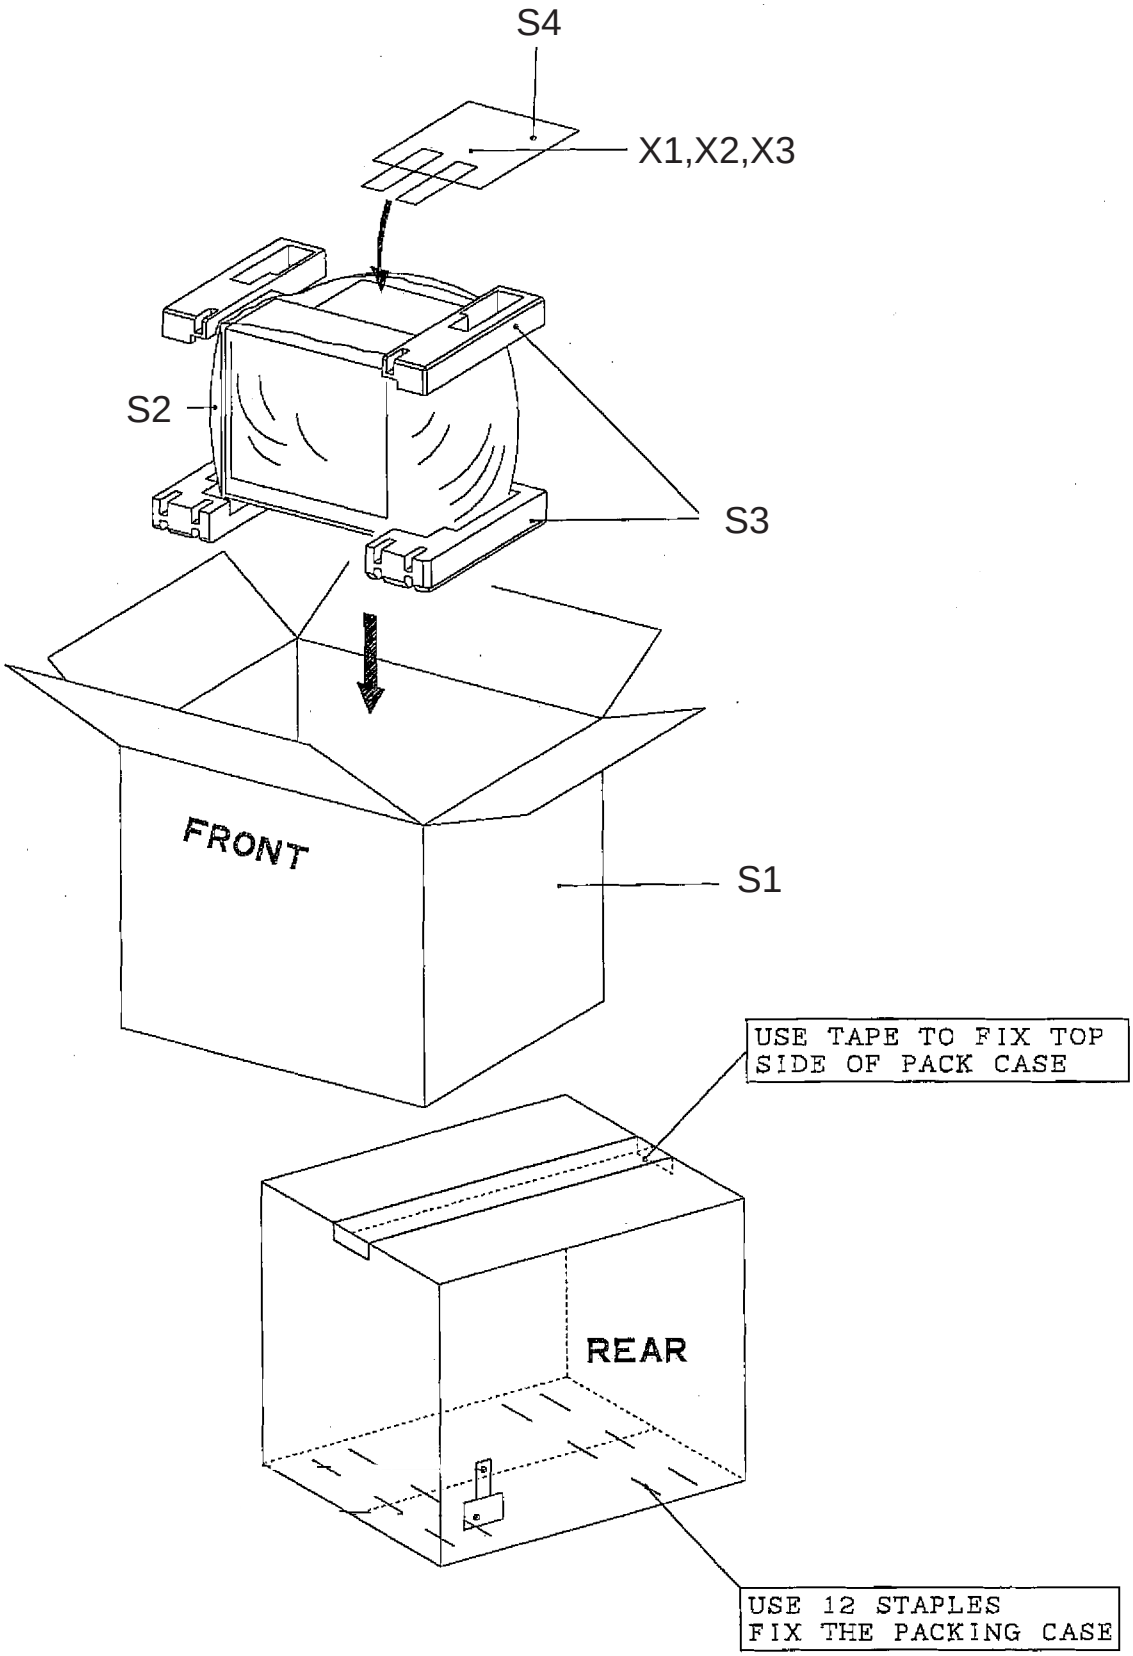

SHARP

COPYRIGHT © 2005 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1862-S
Mar. 2005 Printed in Japan
In Japan gedruckt

Design and Production Information
Design : SEM
Production : SEMEX

MY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages